







Middle Wallet

Printing Instruction

CraftsmanGus


1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to A4 and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”

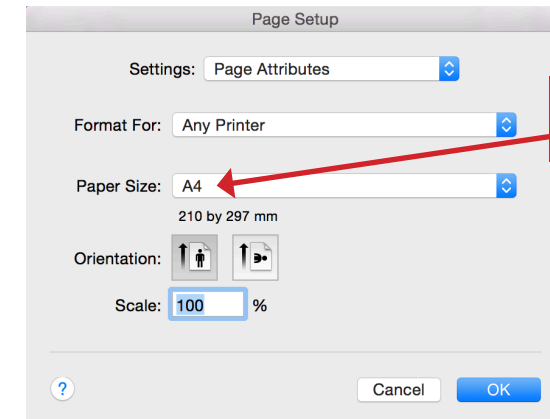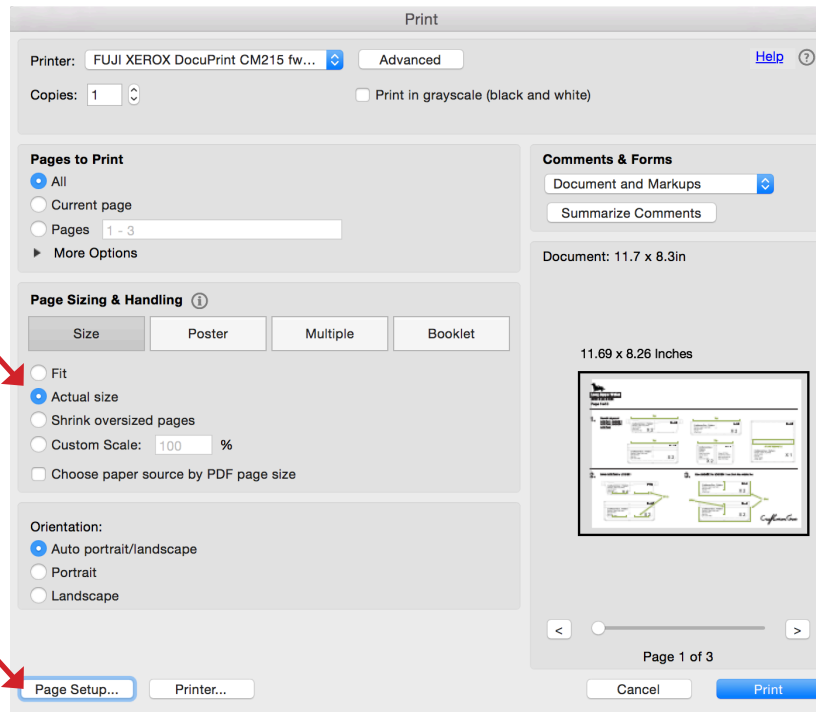

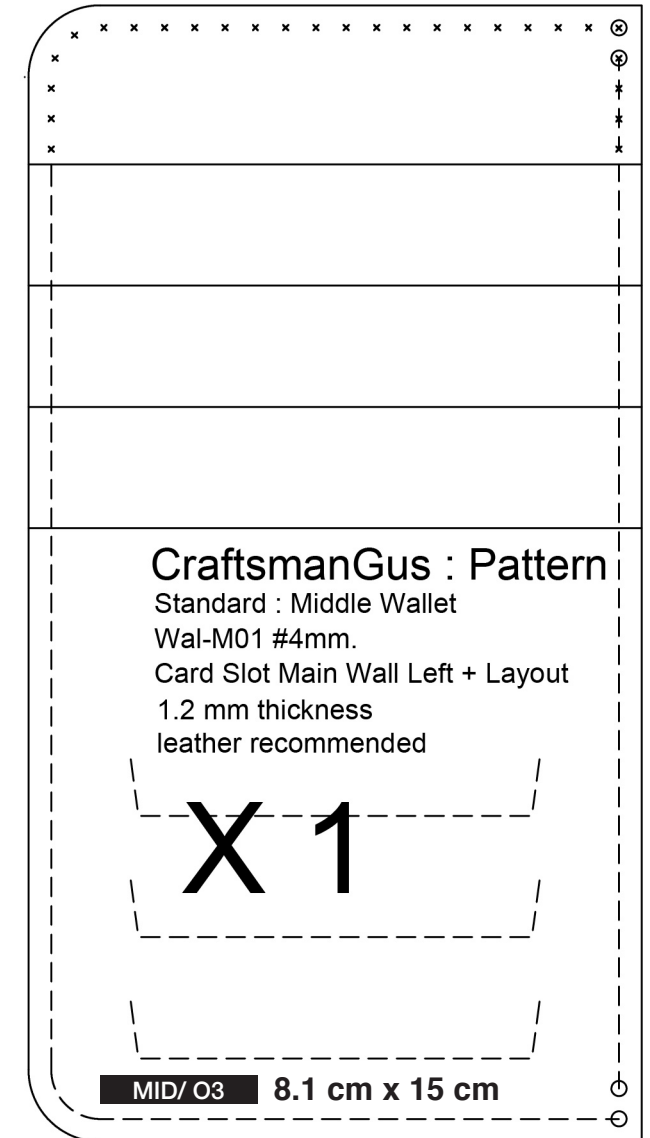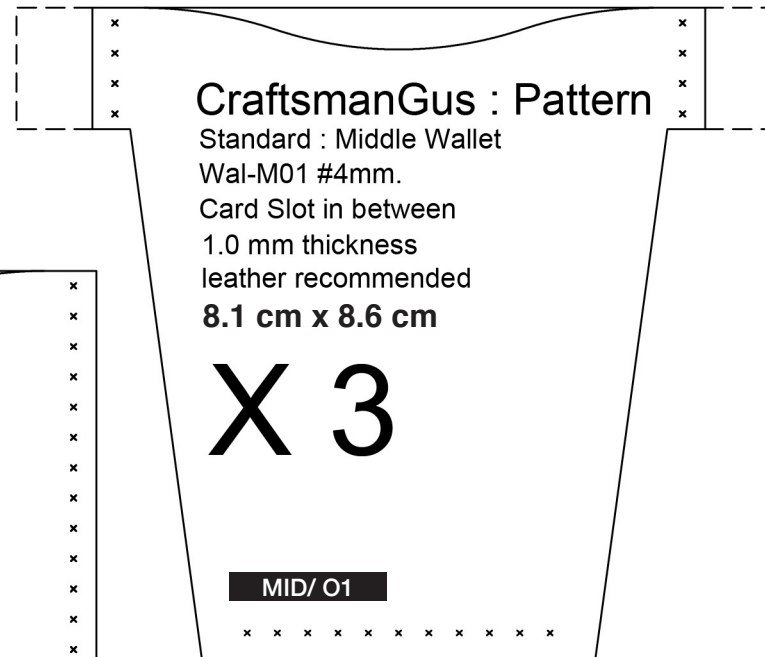



16.1 cm x 15 cm

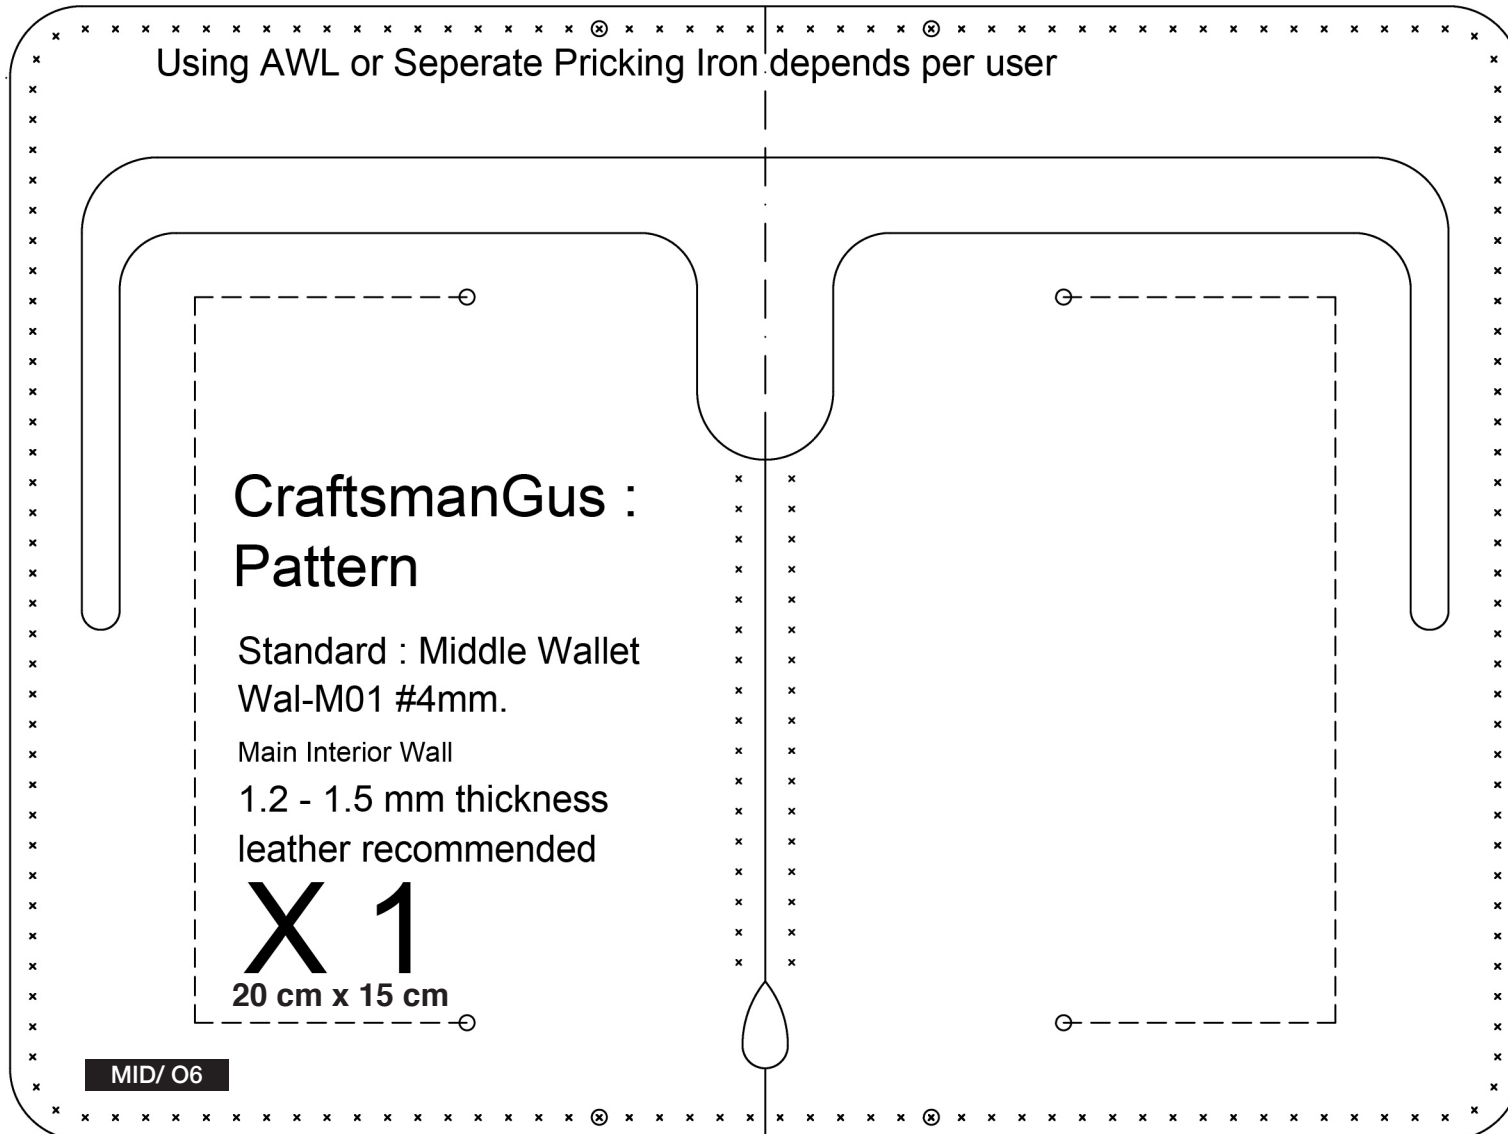



CraftsmanGus : Pattern

Standard : Middle Wallet
Wal-M01 #4mm.

COVER

1.5 - 1.8 mm thickness
leather recommended

X 1

20 cm x 15 cm

MID/ O7