





Middle Wallet

Printing Instruction

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to letter size and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”

Select
Actual size

Set the
paper size

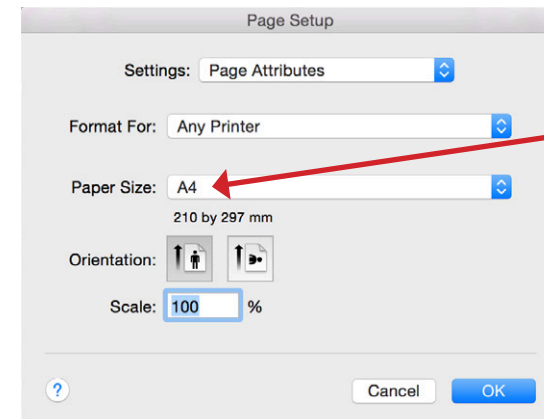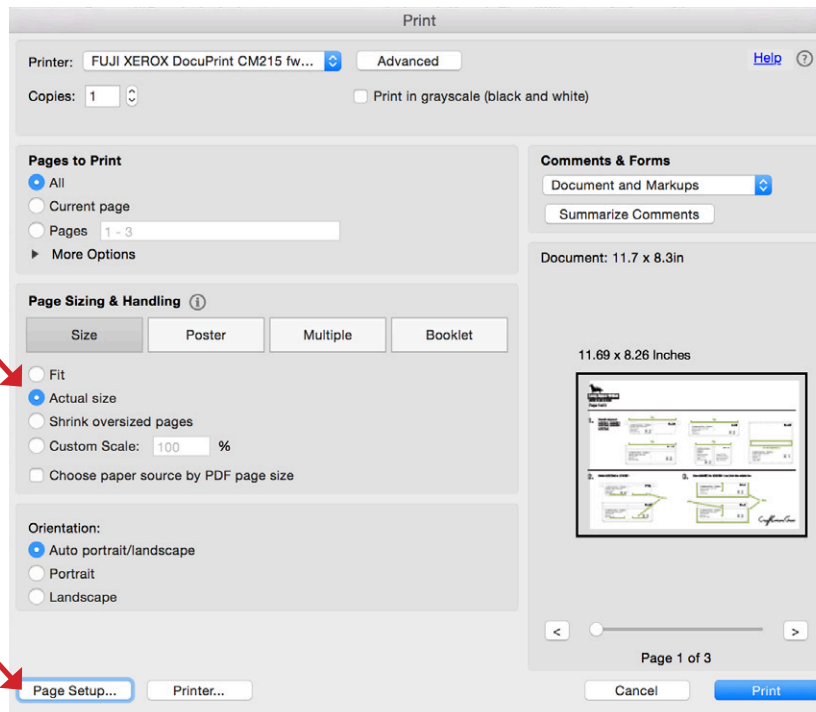

Select
letter size



CraftsmanGus : Pattern

Standard : Middle Wallet

Wal-M01 #4mm.

Card Slot in between

1.0 mm thickness

leather recommended

8.1 cm x 8.6 cm

X 3

MID/ O1

CraftsmanGus :

Pattern 8.1 cm x 8.1 cm

Standard : Middle Wallet

Wal-M01 #4mm.

Top Left Slot

1.0-1.2 mm thickness

leather recommended

X 1

MID/ O2

CraftsmanGus : Pattern

Standard : Middle Wallet

Wal-M01 #4mm.

Card Slot Main Wall Left + Layout

1.2 mm thickness

leather recommended

X 1

MID/ O3 8.1 cm x 15 cm



CraftsmanGus : Pattern

x x x x x x x x x x

x

x

x

x

x

x

x

x Standard : Middle Wallet
x Wal-M01 #4mm.

x Card Slot Main Left Wall Back
x 0.8-1.2 mm thickness
x leather recommended

x **X 1**

x 8.1 cm x 15 cm

x

x

x x x x x x x x x x

MID/ O4

Zipper YKK No.#3

CraftsmanGus : Pattern

Standard : Middle Wallet
Wal-M01 #4mm.


Zipper Slot Right

0.8-1.2 mm thickness
leather recommended

X 1

16.1 cm x 15 cm

MID/ O5

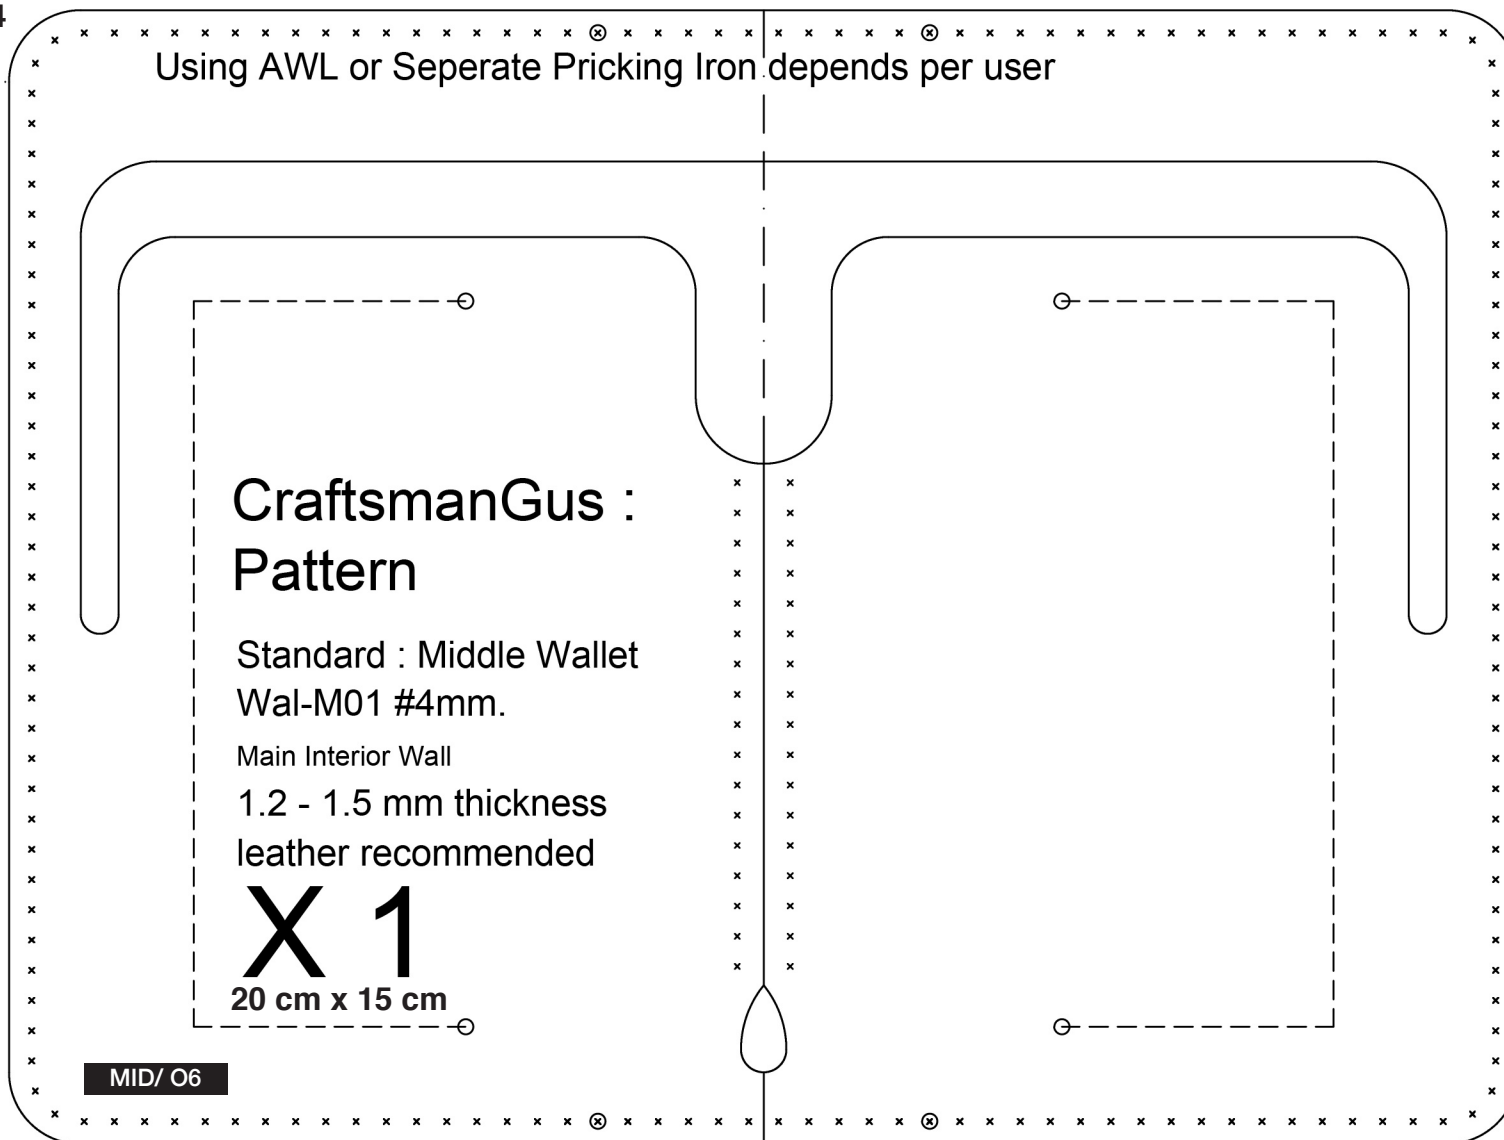



CraftsmanGus : Pattern

Standard : Middle Wallet
Wal-M01 #4mm.

COVER

1.5 - 1.8 mm thickness
leather recommended

X 1

20 cm x 15 cm

MID/ O7