

# Traveller's Book - L

Legends

Name of the Pattern > CraftsmanGus Pattern

Working Code Name > BSD 001

Name of Parts > Typical Card Slot 2nd & 3rd Slot Bottom

Name of Materials > Thin Polyester Lining Fabric Recommended

Notes > \*For small card lining will be less wide (2mm. less for L&R side)

Line Type

Solid line : For boundaries/borders of the material

Dash line : If out of borders mean to an excess. Need to be cut after stitch.

Dash line with x in o : Stitching line without need to be precise hole punching.

Solid line without x in o : Cutting line as slit.

Dash + 10dot line : Center Line

Dash + 20dot line : Border line after folded.

Italic hatch within dash border : Excess, need to be cut after stitch.

Dotted line : Indicates where are other borders underneath.

Continuous-C line : Groove line on the back of the leather/ for folding.

0.5 mm.

Leather

Lining

Cushion

0.5-1.5 mm.

Stiffener

Stiffener

GUIDE CARD




















Stiffener (Here)

Table of Materials :

Graphic sign to help for working more clearer.  
Description written in each templates.


X 2

(Number of pieces required)

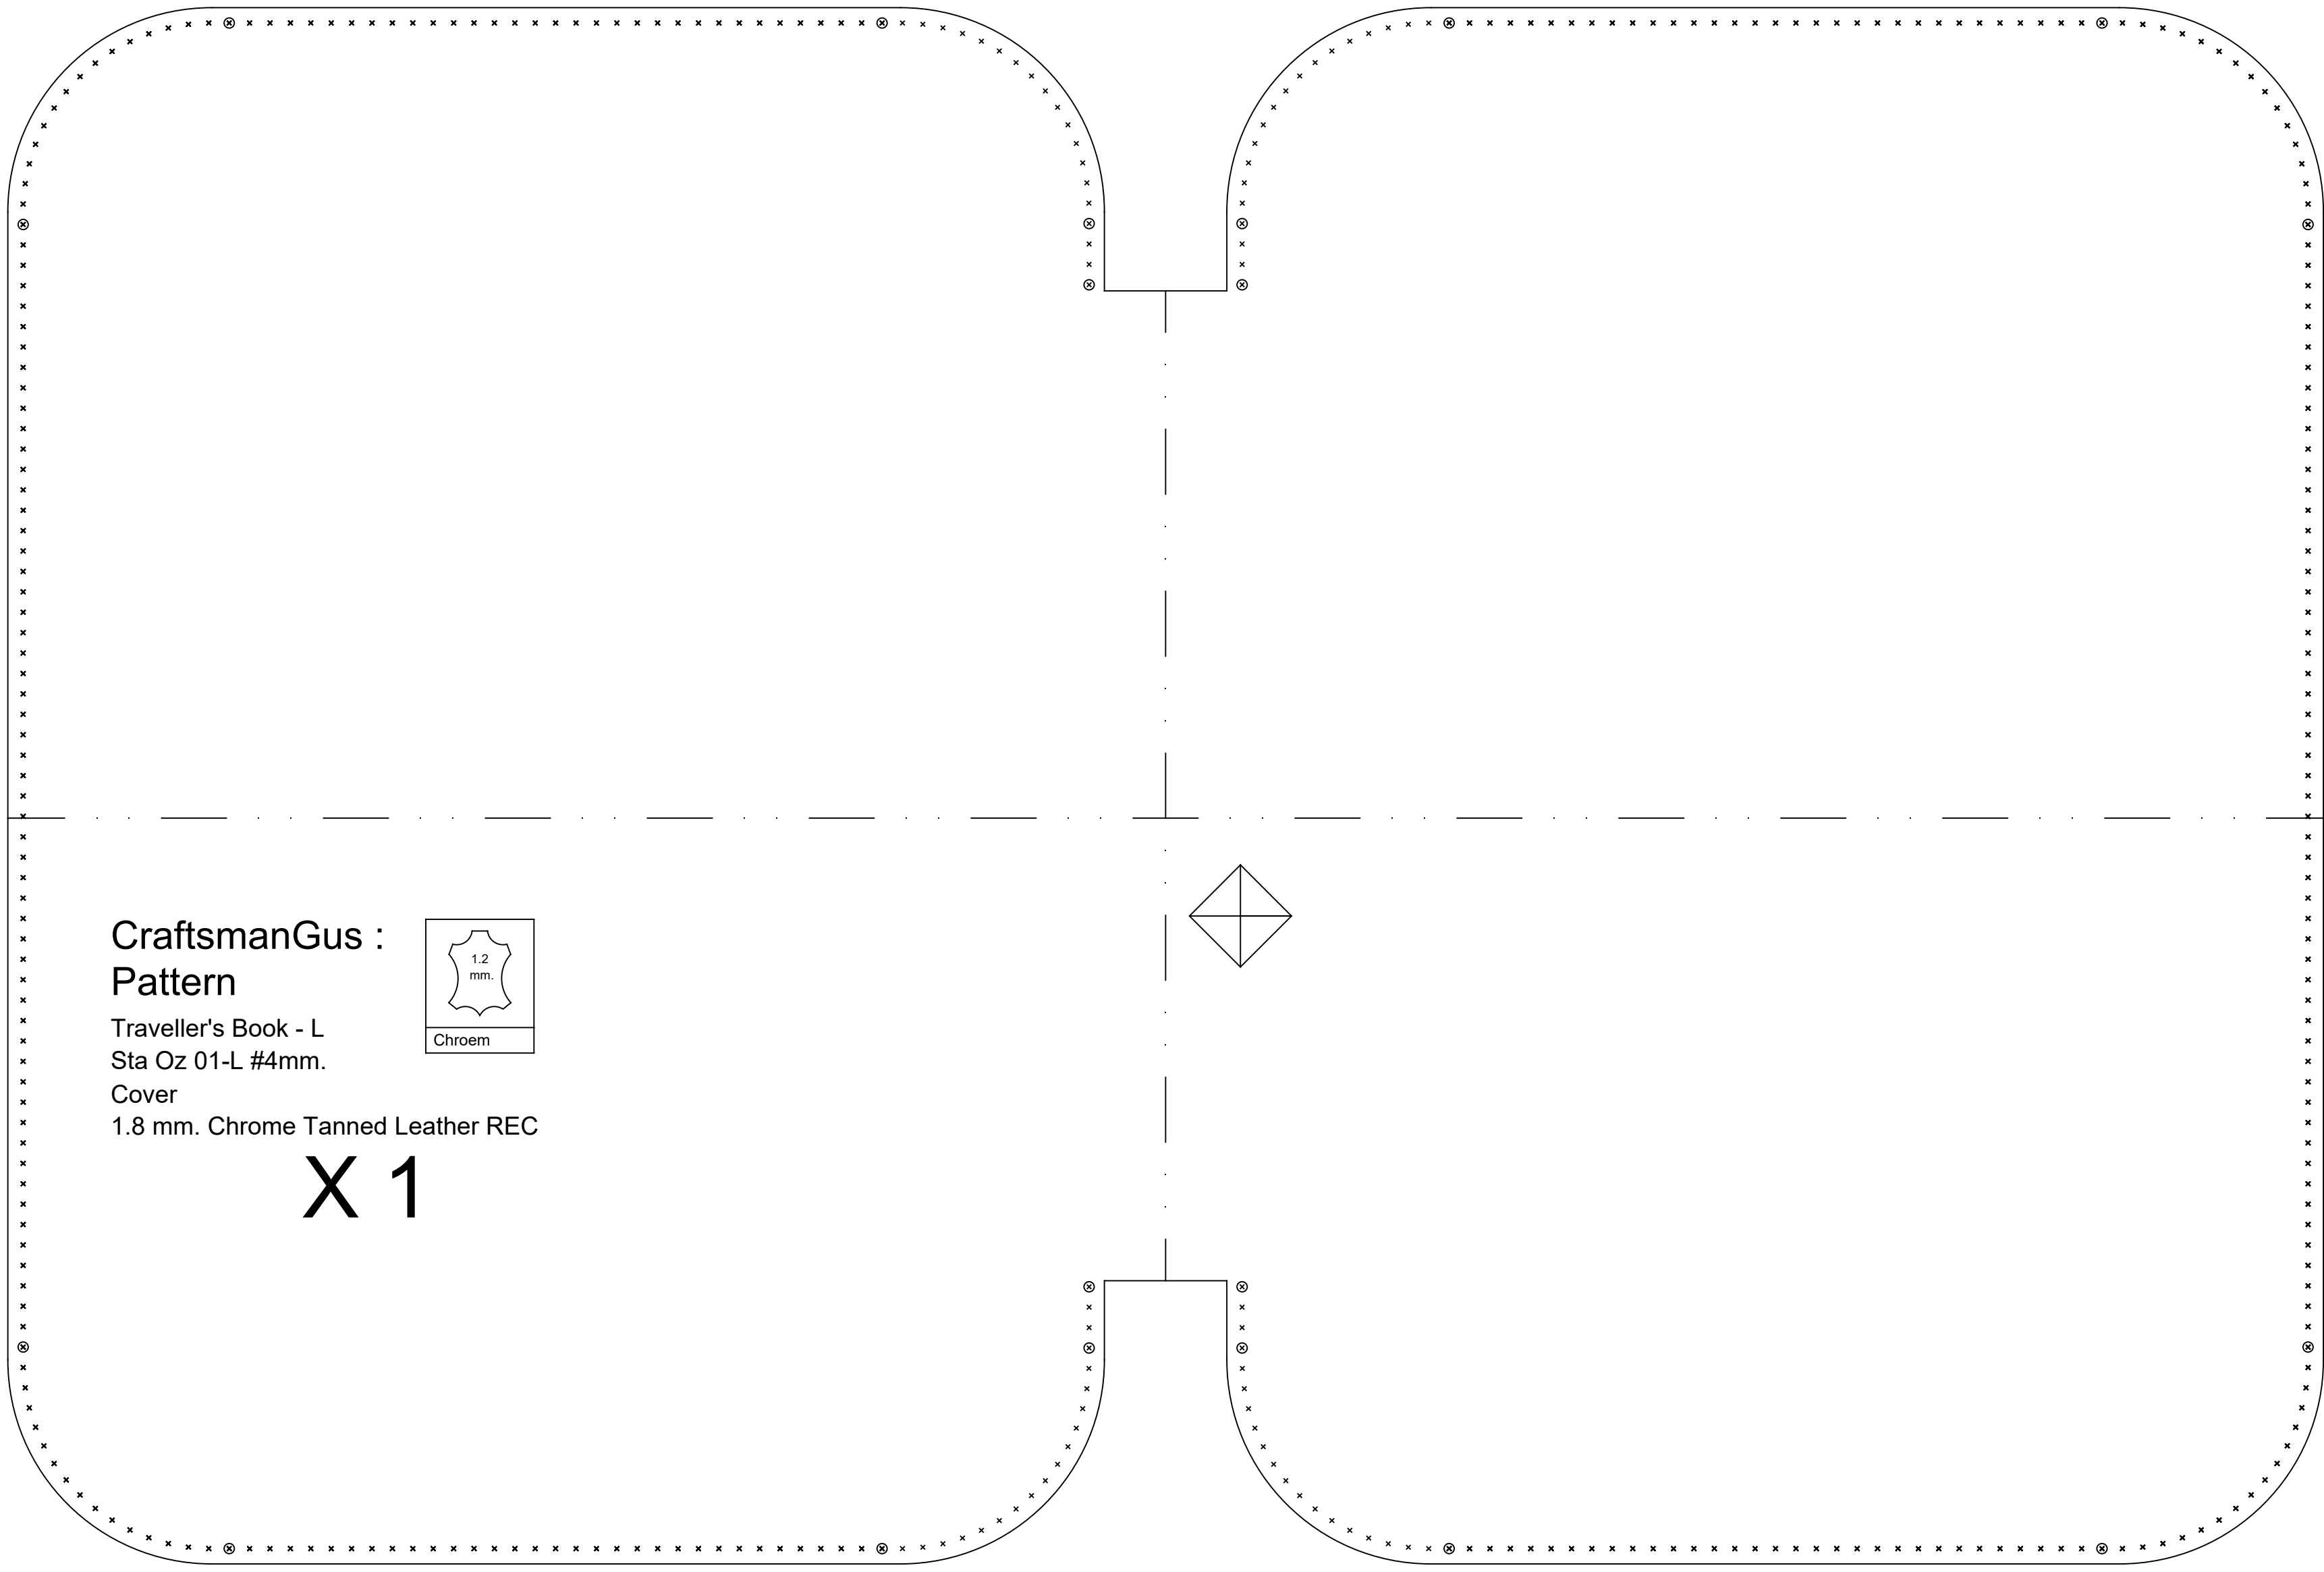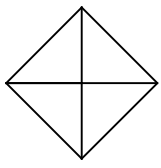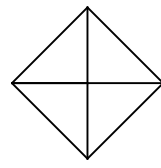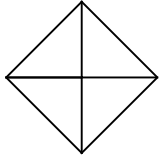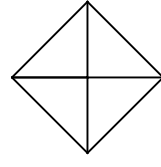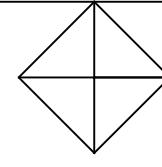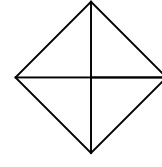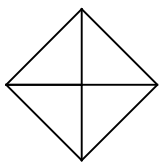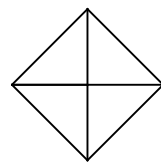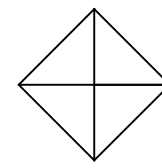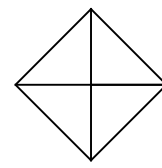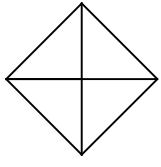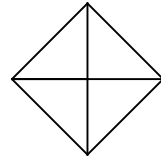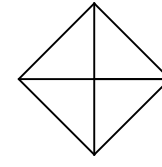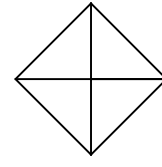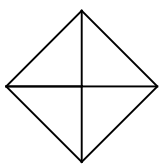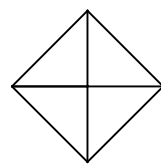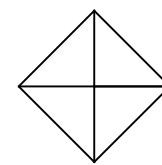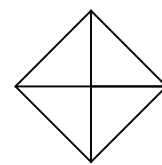


CraftsmanGus :  
Pattern

Traveller's Book - L  
Sta Oz 01-L #4mm.  
Cover  
1.8 mm. Chrome Tanned Leather REC

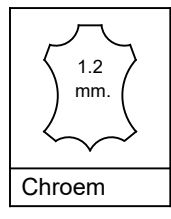


X 1

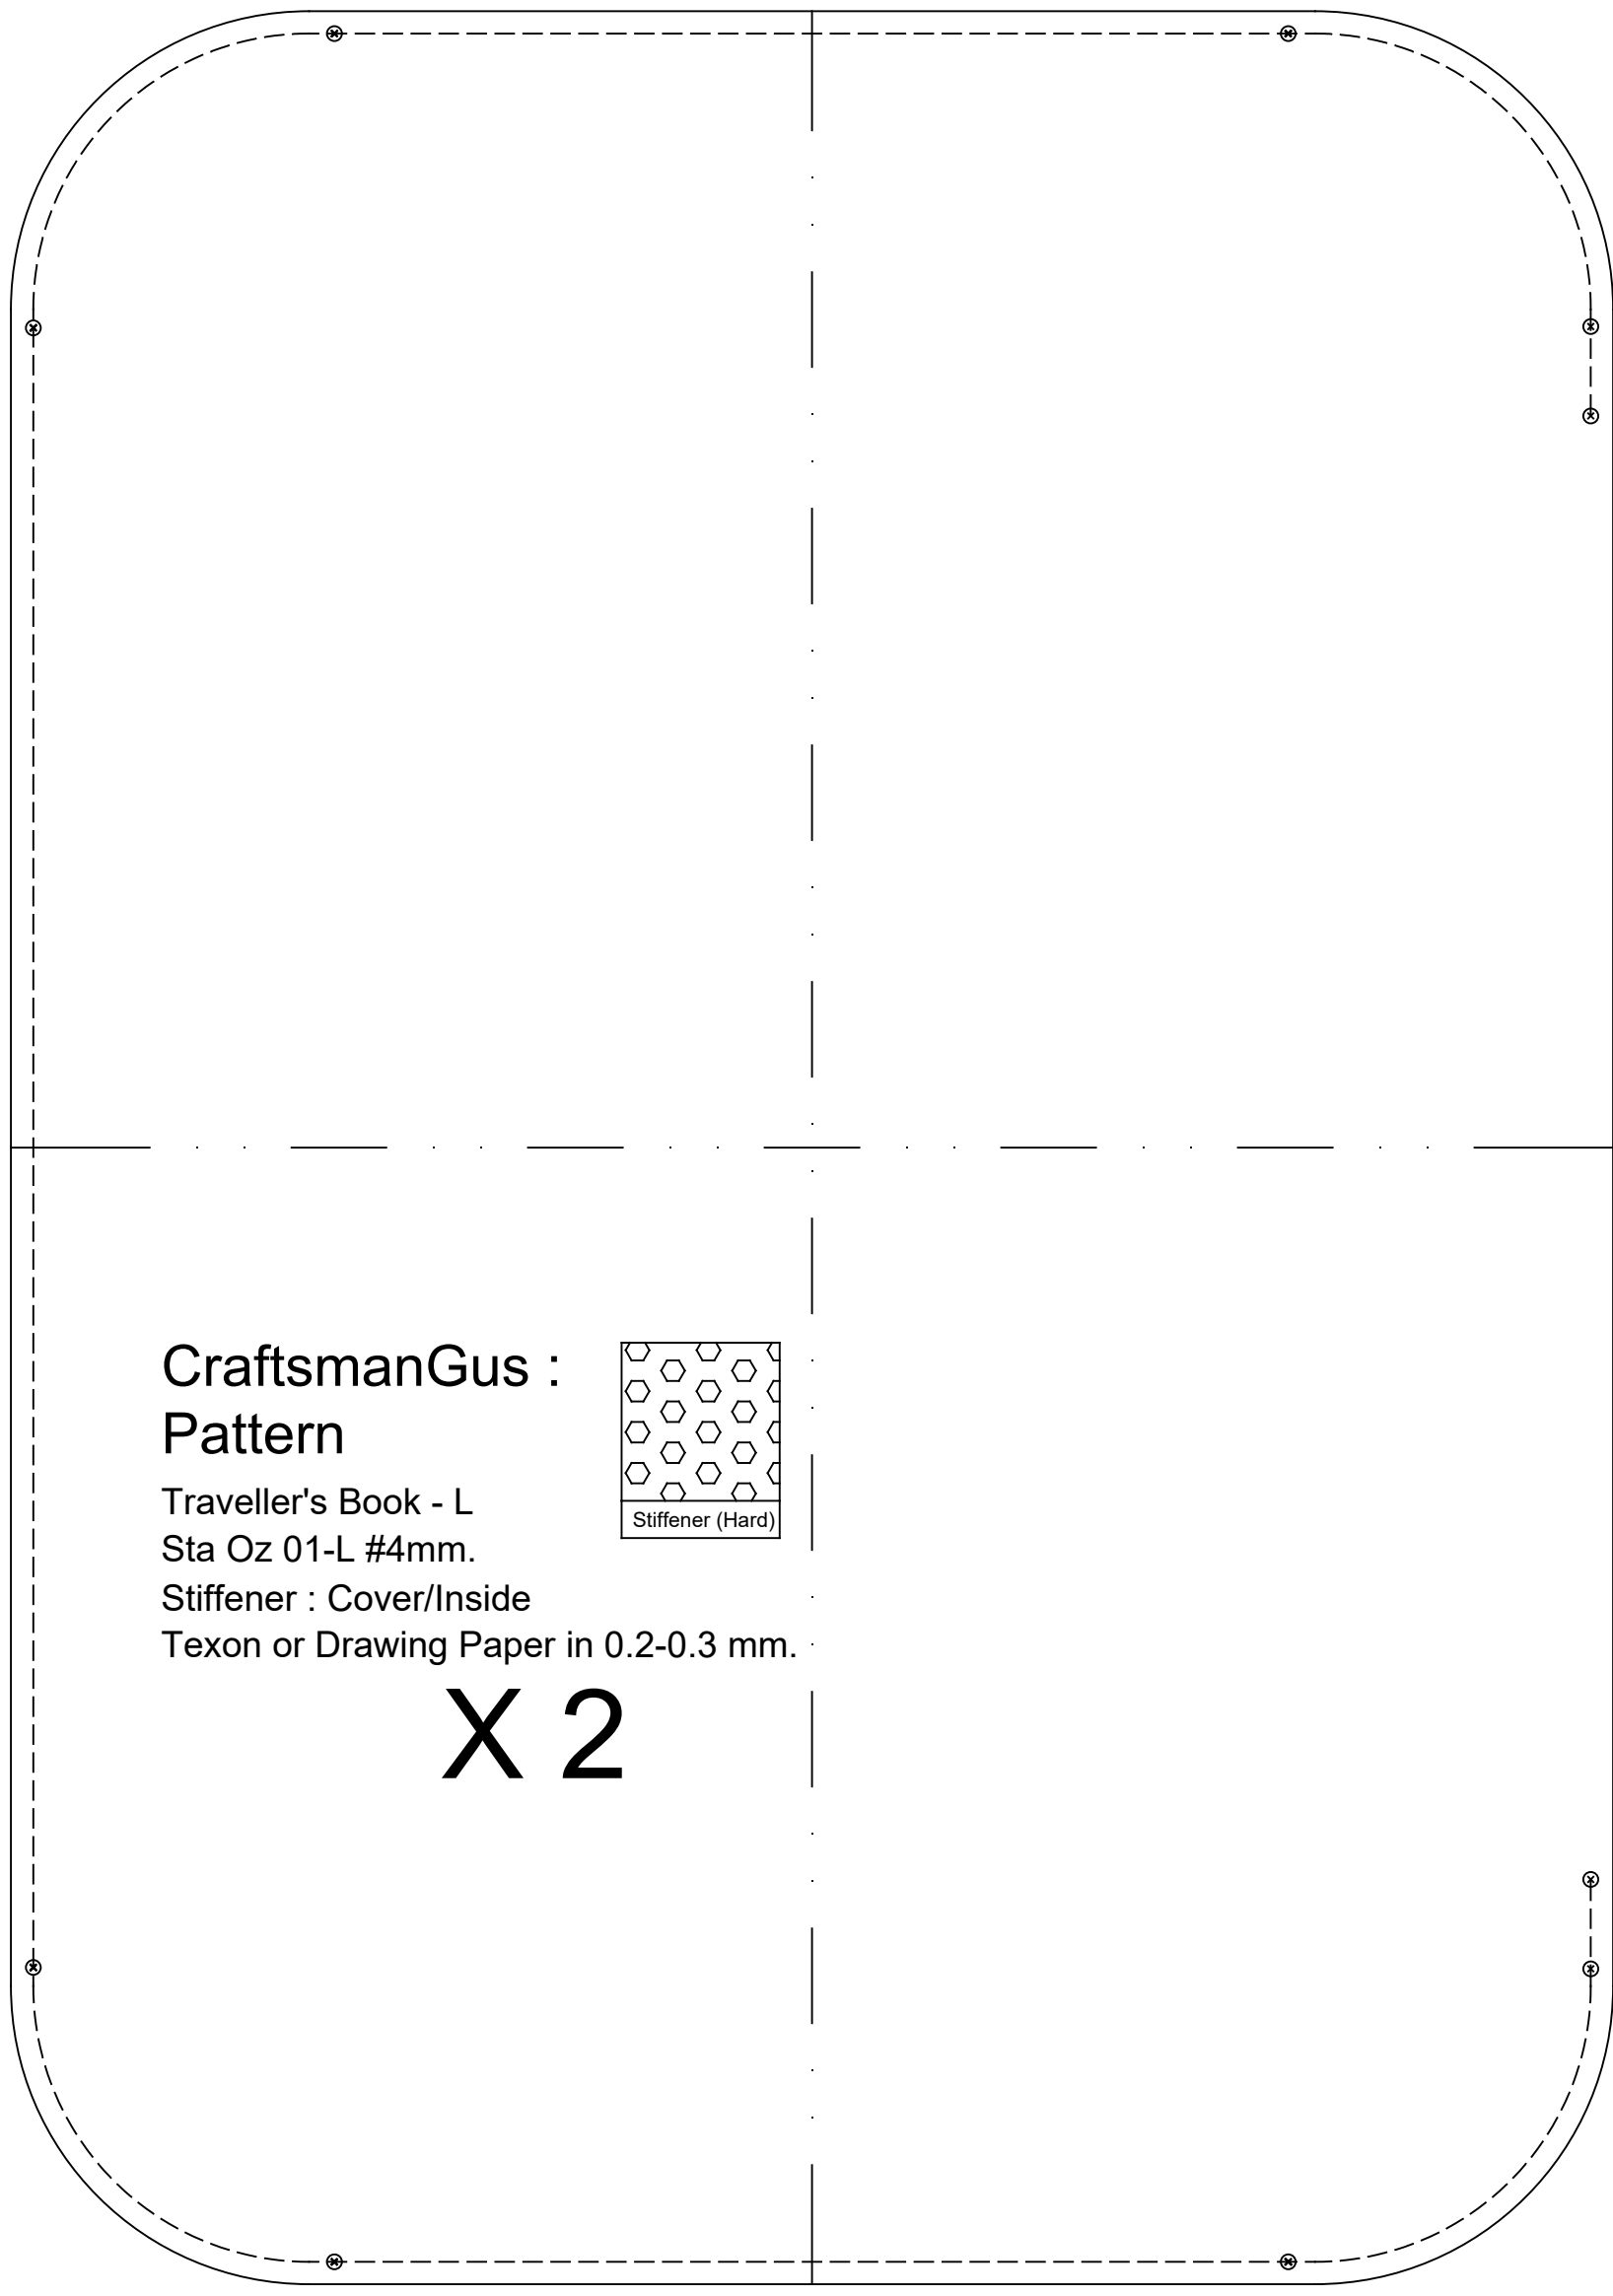


CraftsmanGus :  
Pattern

Traveller's Book - L  
Sta Oz 01-L #4mm.  
Stiffener : Cover/Inside  
Texon or Drawing Paper in 0.2-0.3 mm.

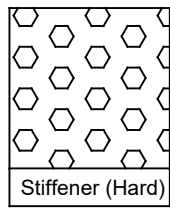


X 2

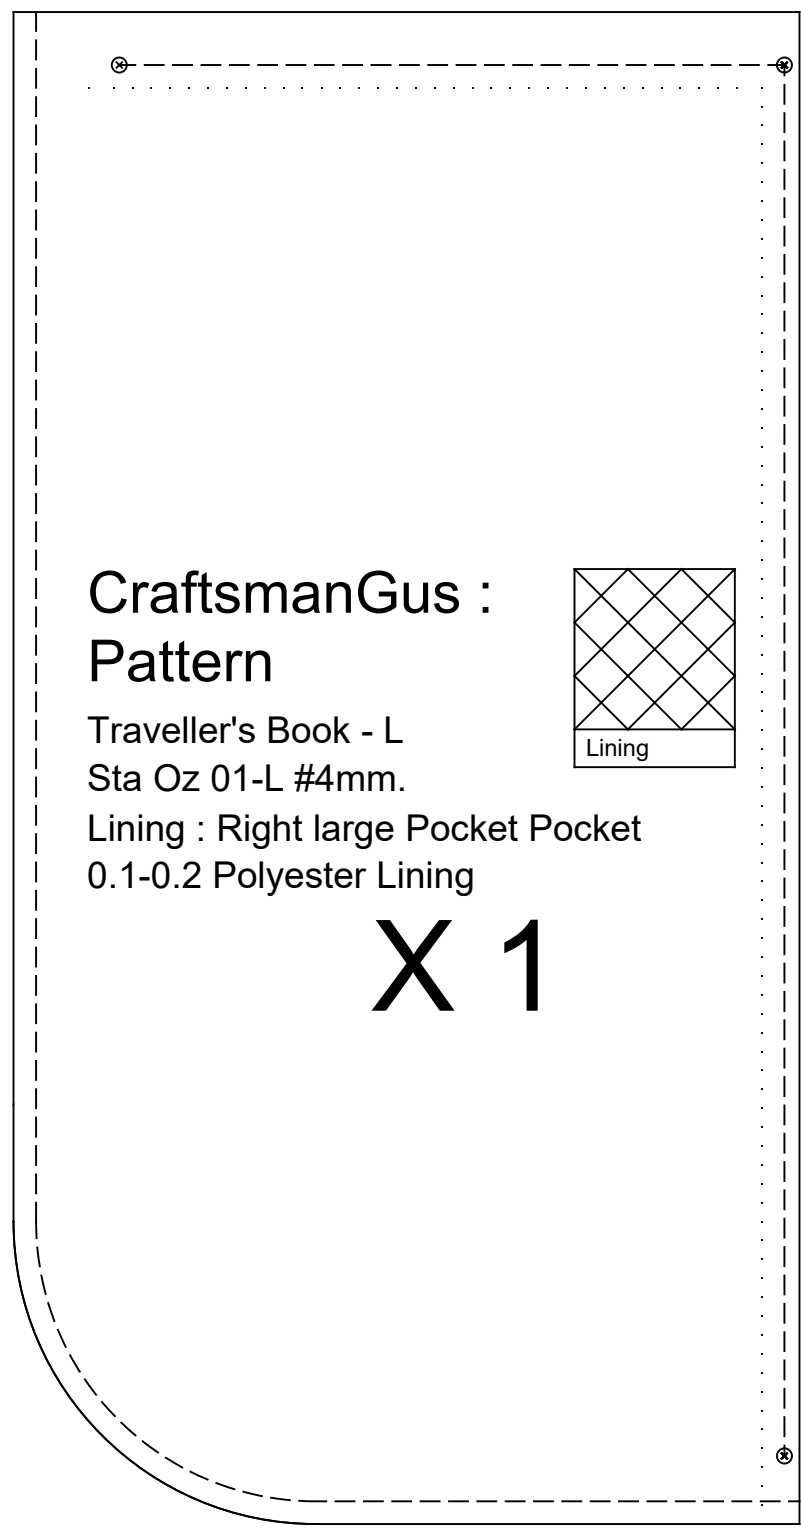


CraftsmanGus :  
Pattern

Traveller's Book - L  
Sta Oz 01-L #4mm.  
Lining : Right large Pocket Pocket  
0.1-0.2 Polyester Lining

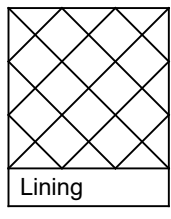


X 1

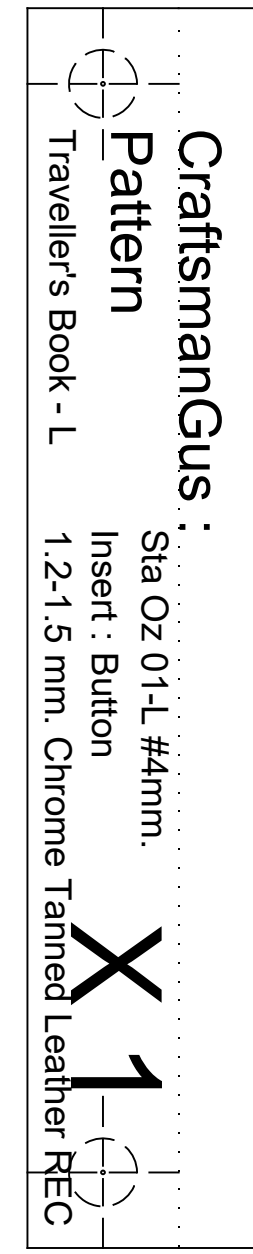


CraftsmanGus :  
Pattern

Traveller's Book - L  
Sta Oz 01-L #4mm.  
Insert : Button  
1.2-1.5 mm. Chrome Tanned Leather REC


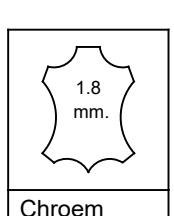


X 1

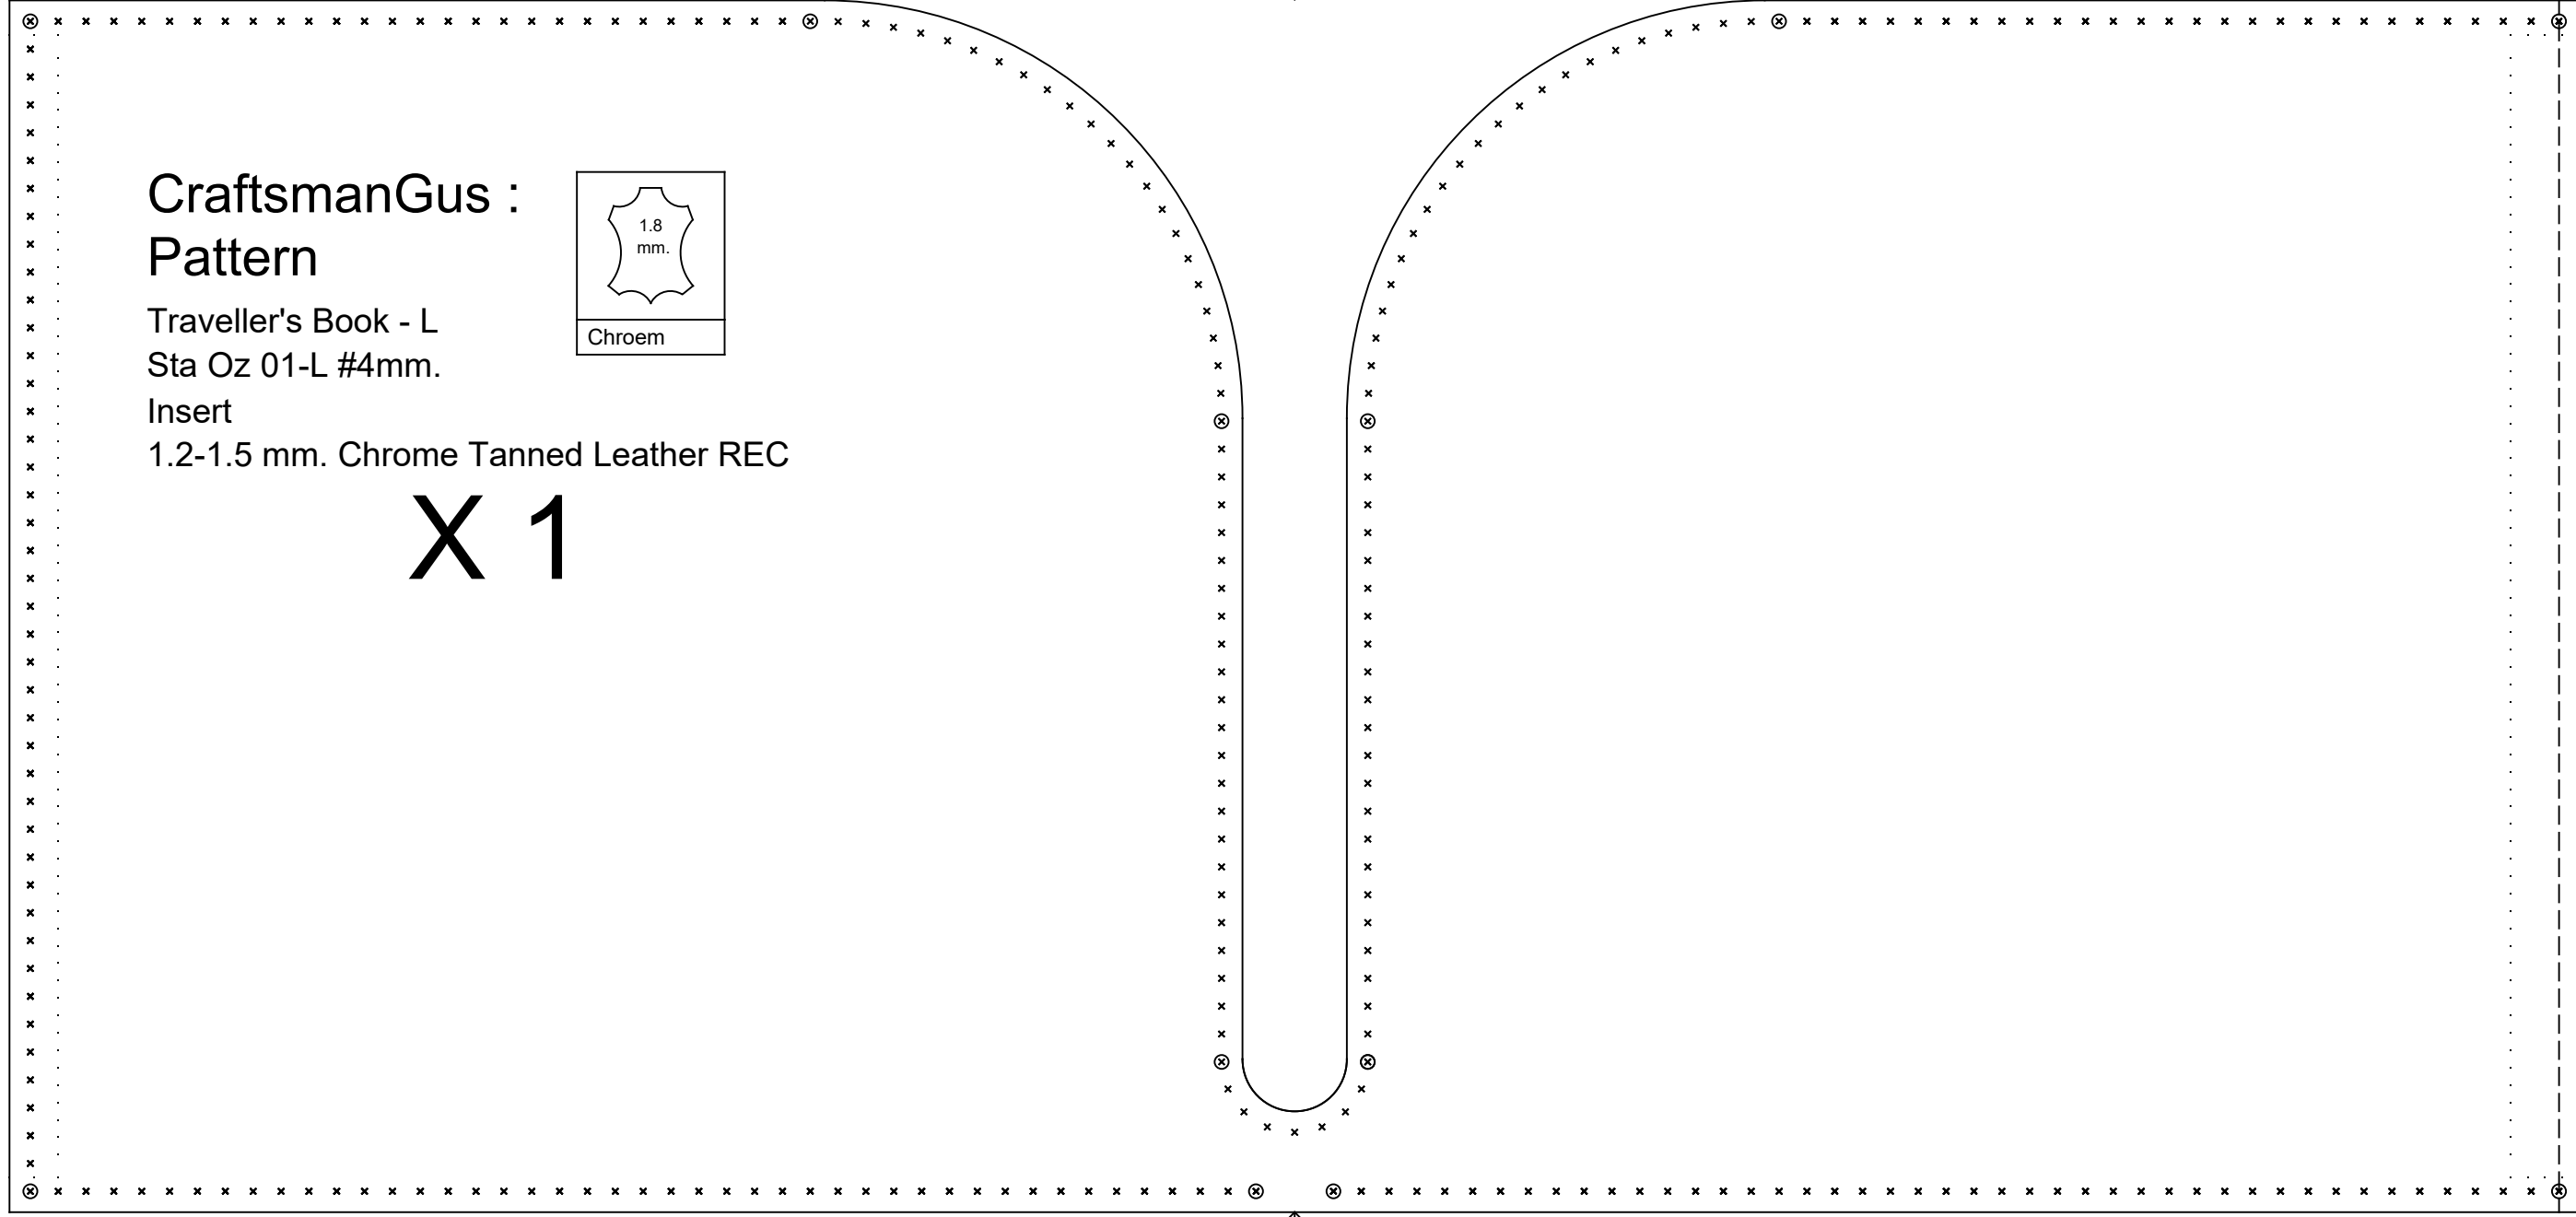


CraftsmanGus :  
Pattern

Traveller's Book - L  
Sta Oz 01-L #4mm.  
Insert  
1.2-1.5 mm. Chrome Tanned Leather REC

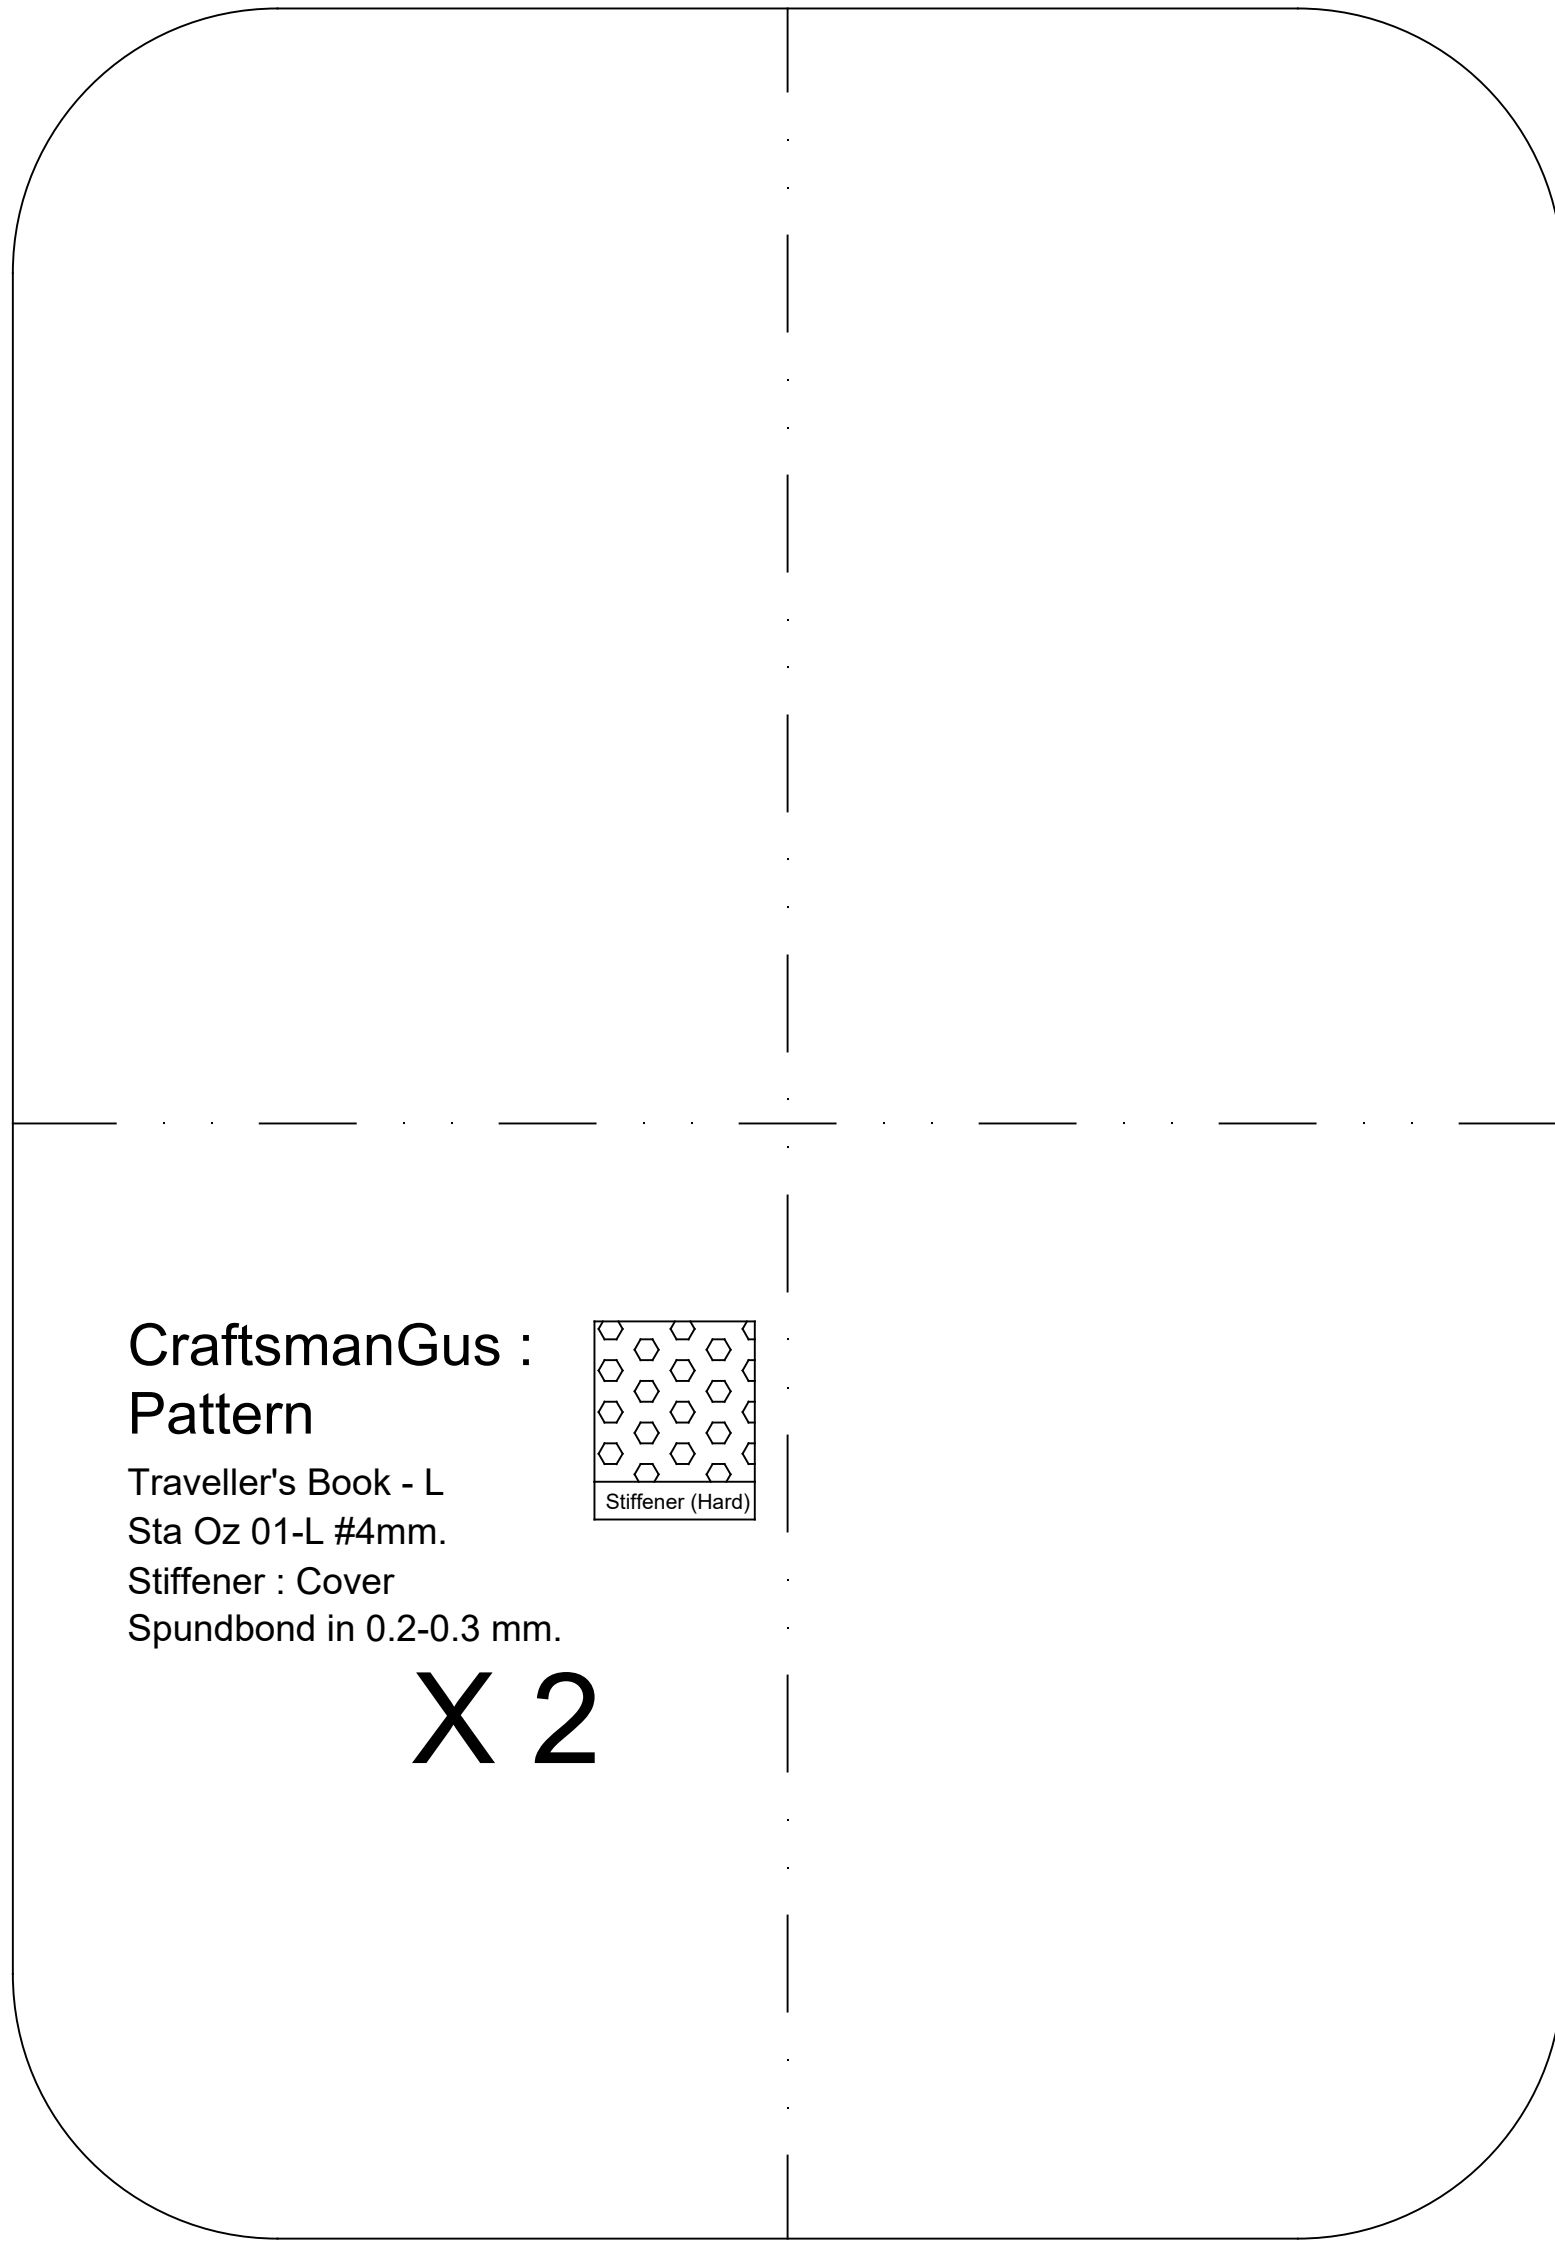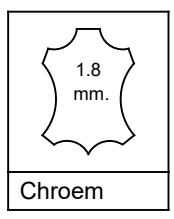

CraftsmanGus :  
Pattern

Traveller's Book - L  
Sta Oz 01-L #4mm.  
Stiffener : Cover  
Spundbond in 0.2-0.3 mm.

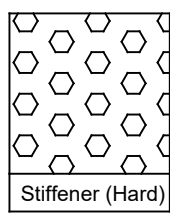

X 2




# Traveller's Book - L

Legends

Name of the Pattern >	Briefcase : Simple Days
Working Code Name >	BSD 001
Name of Parts >	Typical Card Slot 2nd & 3rd Slot Bottom
Name of Materials >	Thin Polyester Lining Fabric Recommended
Notes >	*For small card lining will be less wide (2mm. less for L&R side)

Line Type	
-----	Solid line : For boundaries/borders of the material
- - - - -	Dash line : If out of borders mean to an excess. Need to be cut after stitch.
-----o-----	Dash line with x in o : Stitching line without need to be precise hole punching.
-----o-----	Solid line without x in o : Cutting line as slit.
- - - - -	Dash + 10Dot line : Center Line
- - - - -	Dash + 20Dot line : Border line after folded.
-----	Italic hatch within dash border : Excess, need to be cut after stitch.
.....	Dotted line : Indicates where are other borders underneath.
-----C-----	Continuous-C line : Groove line on the back of the leather/ for folding.

	Hole/Button Position Signage
	Overlap/Joining paper piece

			<b>Table of Materials :</b> Graphic sign to help for working more clear Description written in each templates.
Leather	Lining	Cushion	

Stiffener	GUIDE CARD	Stiffener (Hard)

X 2

(Number of pieces required)