

LEATHER APRON



Assembly instructions

Difficulty level: Intermediate
Completion Time: 6 - 9 hours

NECESSARY TOOLS

B&W Printer




Scissors or a cutter



Hole Puncher (We recommend 1.8 - 2 mm sized holes for this build)



Approx 9 square feet of leather. (We recommend 3-4oz leather for this build)

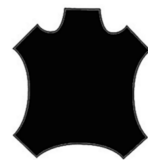

Thread and needles (We recommend 1 mm waxed thread for this build)




4 x 20 mm Buckles

About 30 rapid rivets

4 metal loops or D rings

PRINTING THE PATTERN


Set up your paper size to A4 and choose actual size in the printer settings

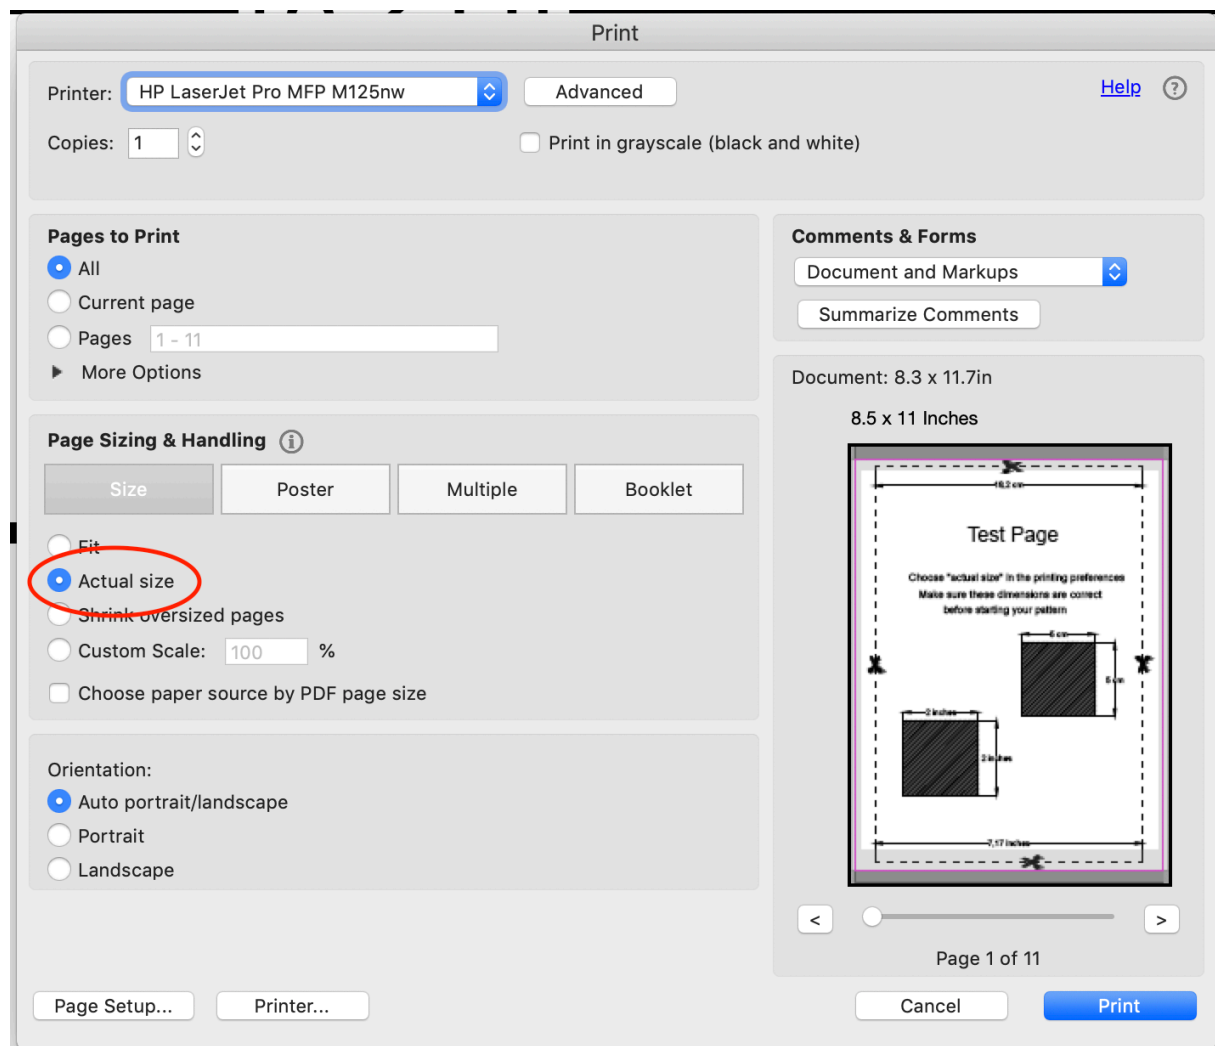

Alternatively you can use “letter” format which is approximately the same size and will not impact the size of the product significantly

Print all the patterns. Take note that most of the pieces are spread over multiple pages
Once you are done you should have all the pieces shown here

The pattern contains two different sizes , S and M for people shorter that 5.5 feet and L and XL for people taller than that.

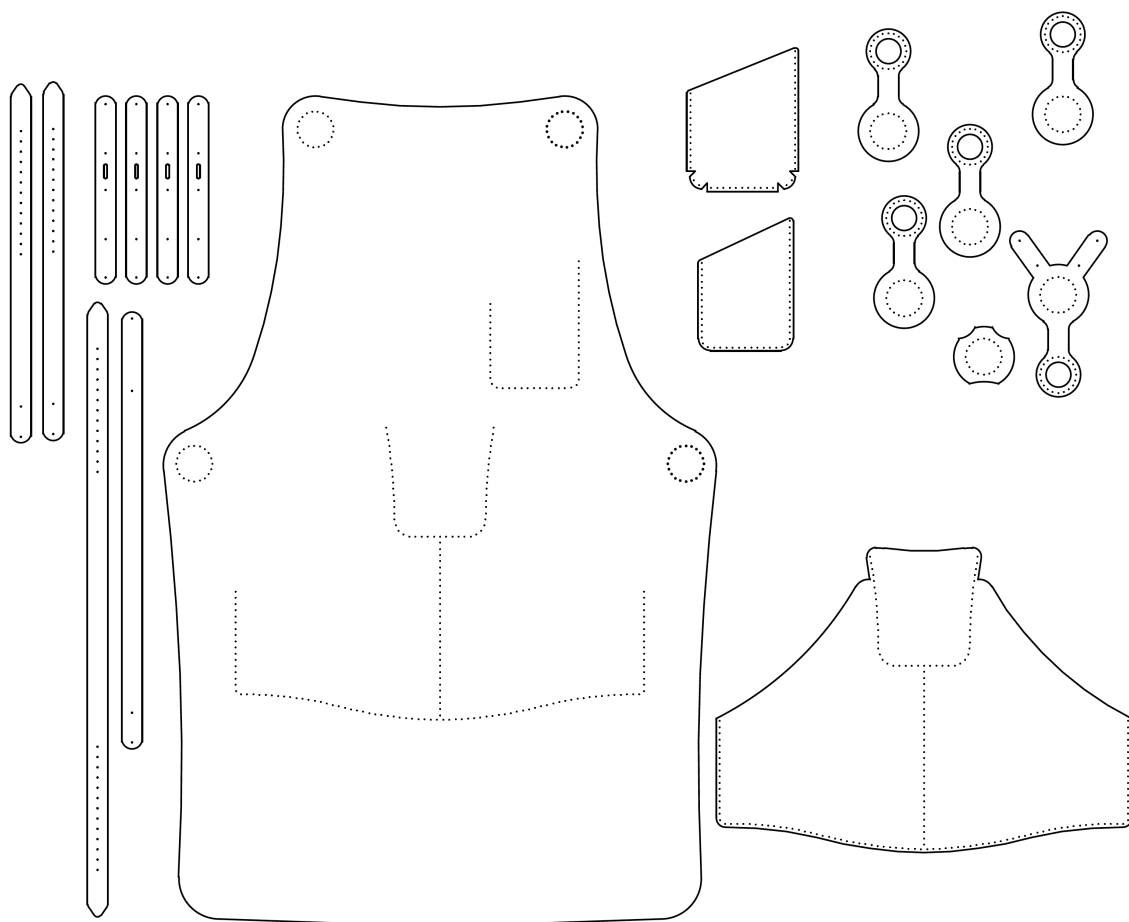

Important Tip *

It is a good idea to try the paper pattern on for size before cutting the leather

In order to further help with your build, we filmed the entire process from the start to finish.
Please access your instructional video here:

<https://youtu.be/QKkHoG5jP04>

Would love to see what you did, so please share or leave a review on Etsy.

Stuck and need help? go ahead and send us a message, someone is always around to give you a hand

Thank you for constructing your mask with our patterns

To further help all our clients we created this FaceBook group for everyone to share ideas and stay up to date

with the latest patterns available.

Please follow the link below to join.

<https://www.facebook.com/groups/1434028716724087/>

Best Regards

Tony