



PRINTING INSTRUCTION

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to the paper size that you will print and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”

Select Actual size

Set the paper size

Select the paper size

Scale 100%






The image displays two screenshots of Adobe Acrobat's printing interface. The left screenshot shows the 'Print' dialog box. In the 'Pages to Print' section, 'All' is selected. In the 'Page Sizing & Handling' section, the 'Size' button is selected, and 'Actual size' is chosen under the 'Fit' options. The 'Page Setup...' button is highlighted with a red arrow and a callout box that says 'Set the paper size'. The right screenshot shows the 'Page Setup' dialog box. In the 'Page Attributes' settings, the 'Paper Size' is set to 'A4' (210 by 297 mm) and the 'Scale' is set to '100%'. Both 'Paper Size' and 'Scale' are highlighted with red arrows and callout boxes that say 'Select the paper size' and 'Scale 100%' respectively.



IMPORTANT NOTE:

- **ADOBE ACROBAT READER (FREE SOFTWARE)** is recommended to open and print the patterns

link for free download



<https://get.adobe.com/reader>

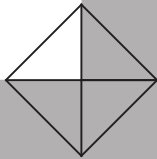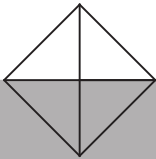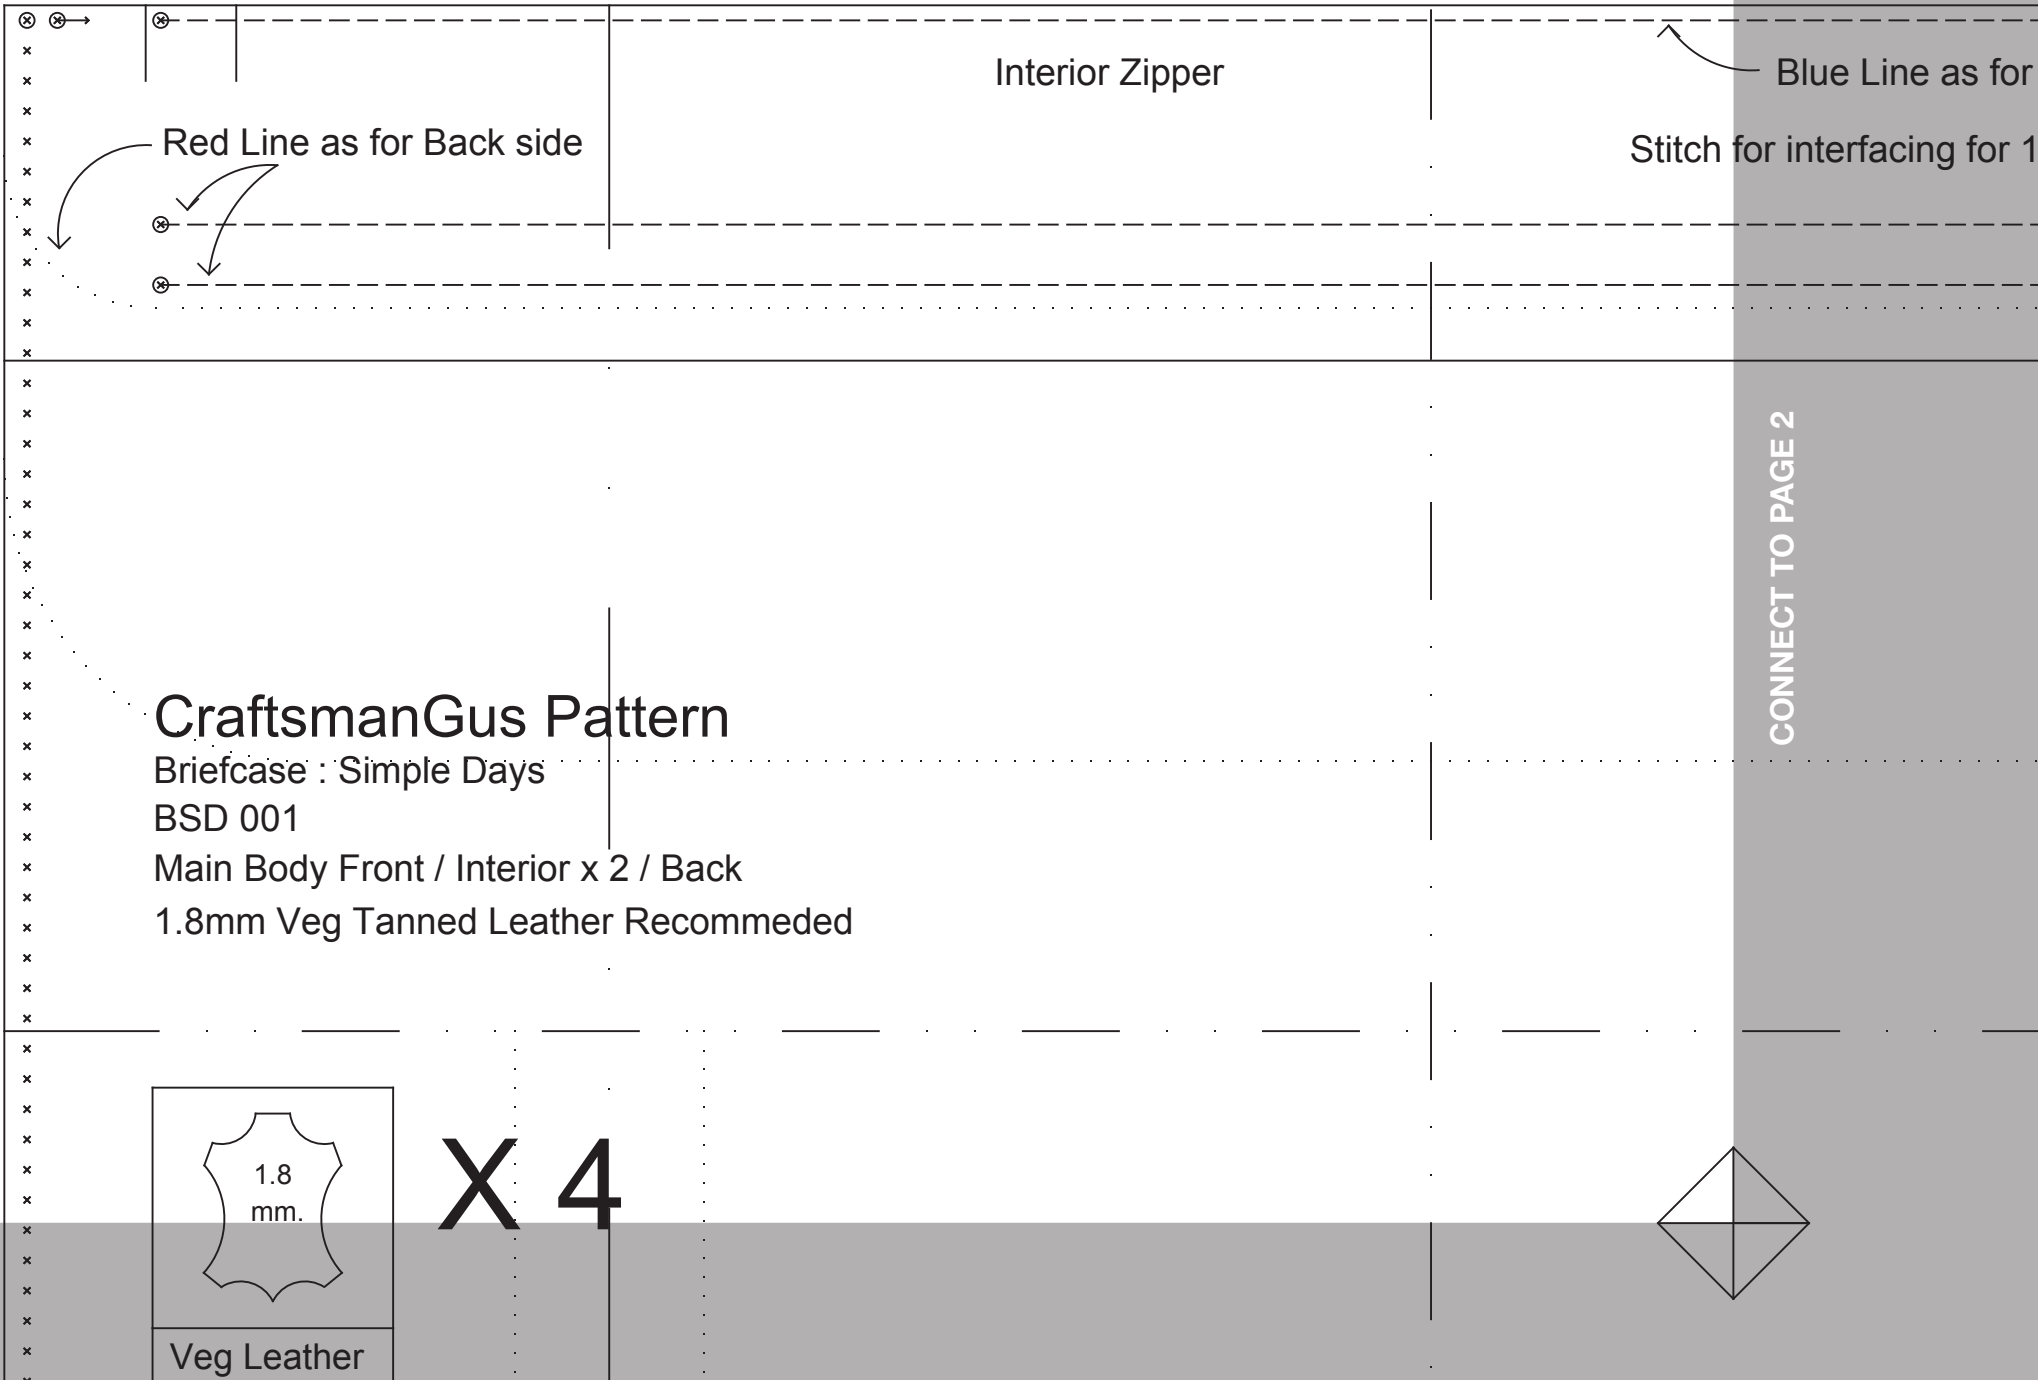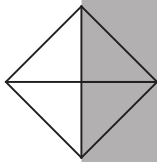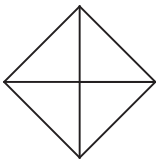

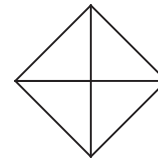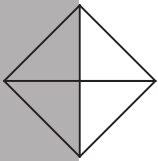

Blue Line as for 2nd & 3rd Interior Side
Stitch for interfacing for 1st & 4th(Back)' interfacing

CONNECT TO PAGE 1

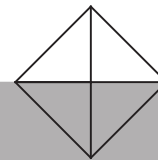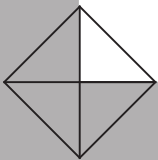

CraftsmanGus Pattern

Briefcase : Simple Days

BSD 001

Gusset/Side pieces

1.8mm Veg Tanned Leather Recommended

X 6

Veg Leather

1.8
mm.



X 4

CONNECT TO PAGE 1

Axis Line of Lock Straps

Center / Axis Line of Lock


CraftsmanGus Pattern

Briefcase : Simple Days


BSD 001

Bottom Gusset

1.8mm Veg Tanned Leather Recommended



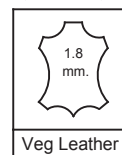





X 3

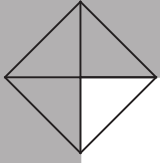




Axis Line of Lock Straps

CONNECT TO PAGE 2

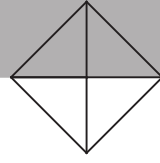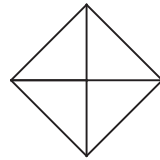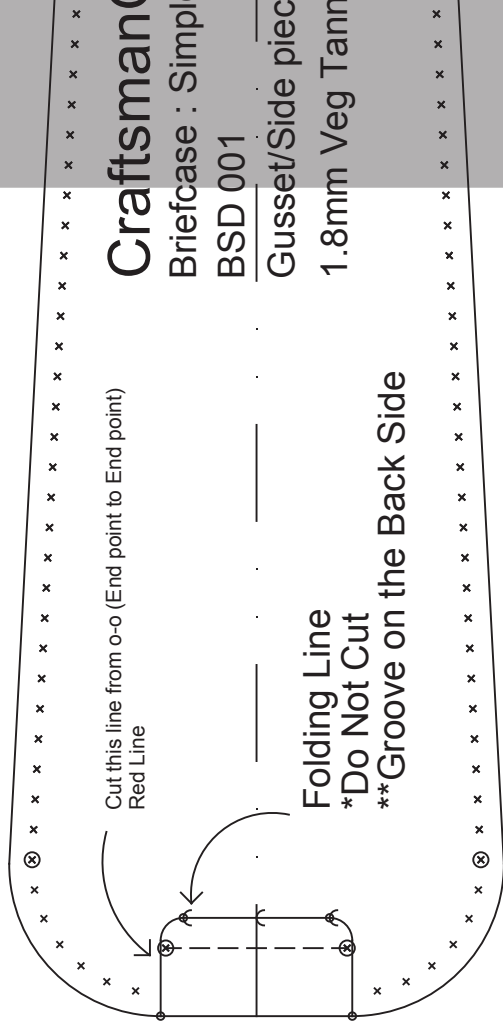

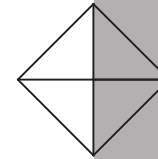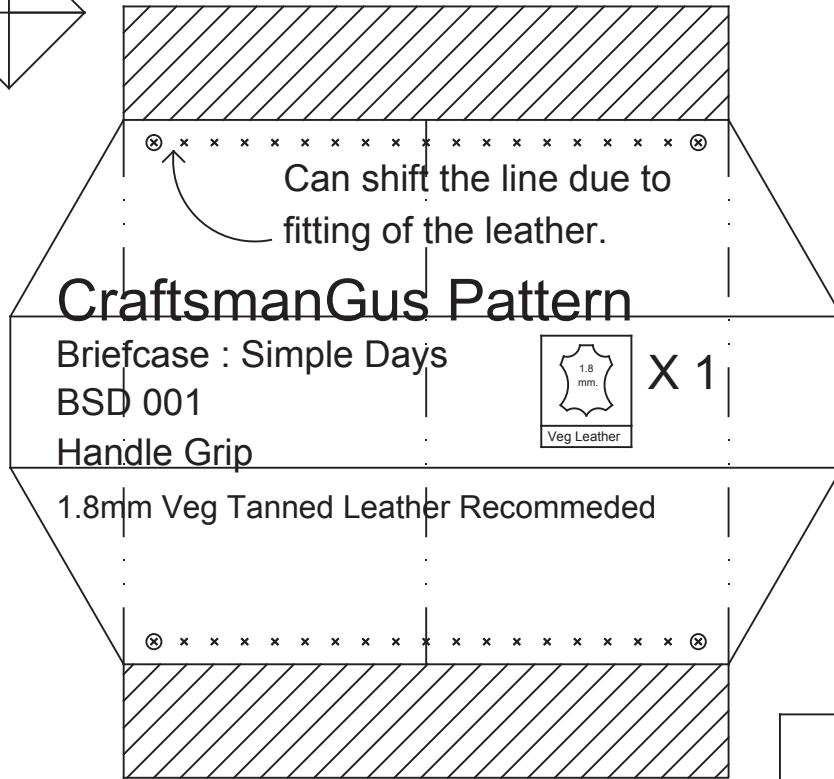
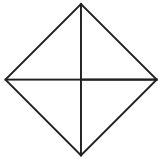


CONNECT TO PAGE 6

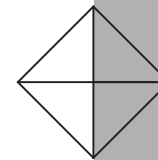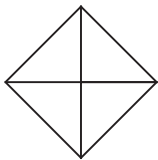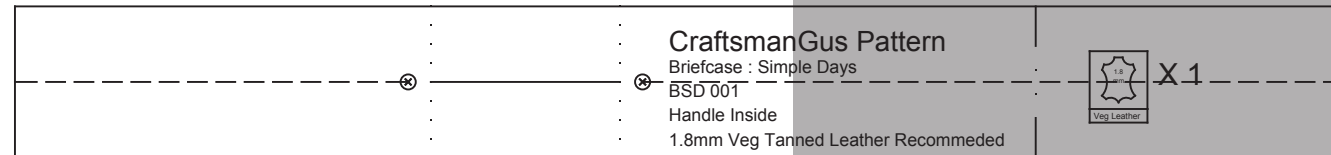



CONNECT TO PAGE 5

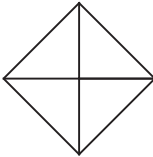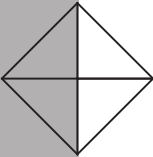

CraftsmanGus Pattern

Briefcase : Simple Days

BSD 001

Handle Spine

1.8mm Veg Tanned Leather Recommended

X 1

CraftsmanGus Pattern

Briefcase : Simple Days

BSD 001

Handle Inside

1.8mm Veg Tanned Leather Recommended

X 1

CraftsmanGus Pattern



Briefcase : Simple Days


BSD 001

Handle Outside

1.8mm Veg Tanned Leather Recommended


X 1

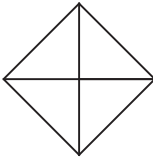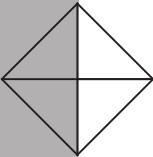

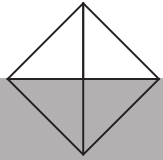


CONNECT TO PAGE 8


needed

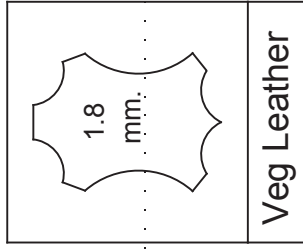


X 1

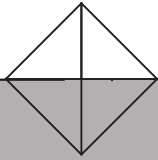

Center / Axis Line of Lock

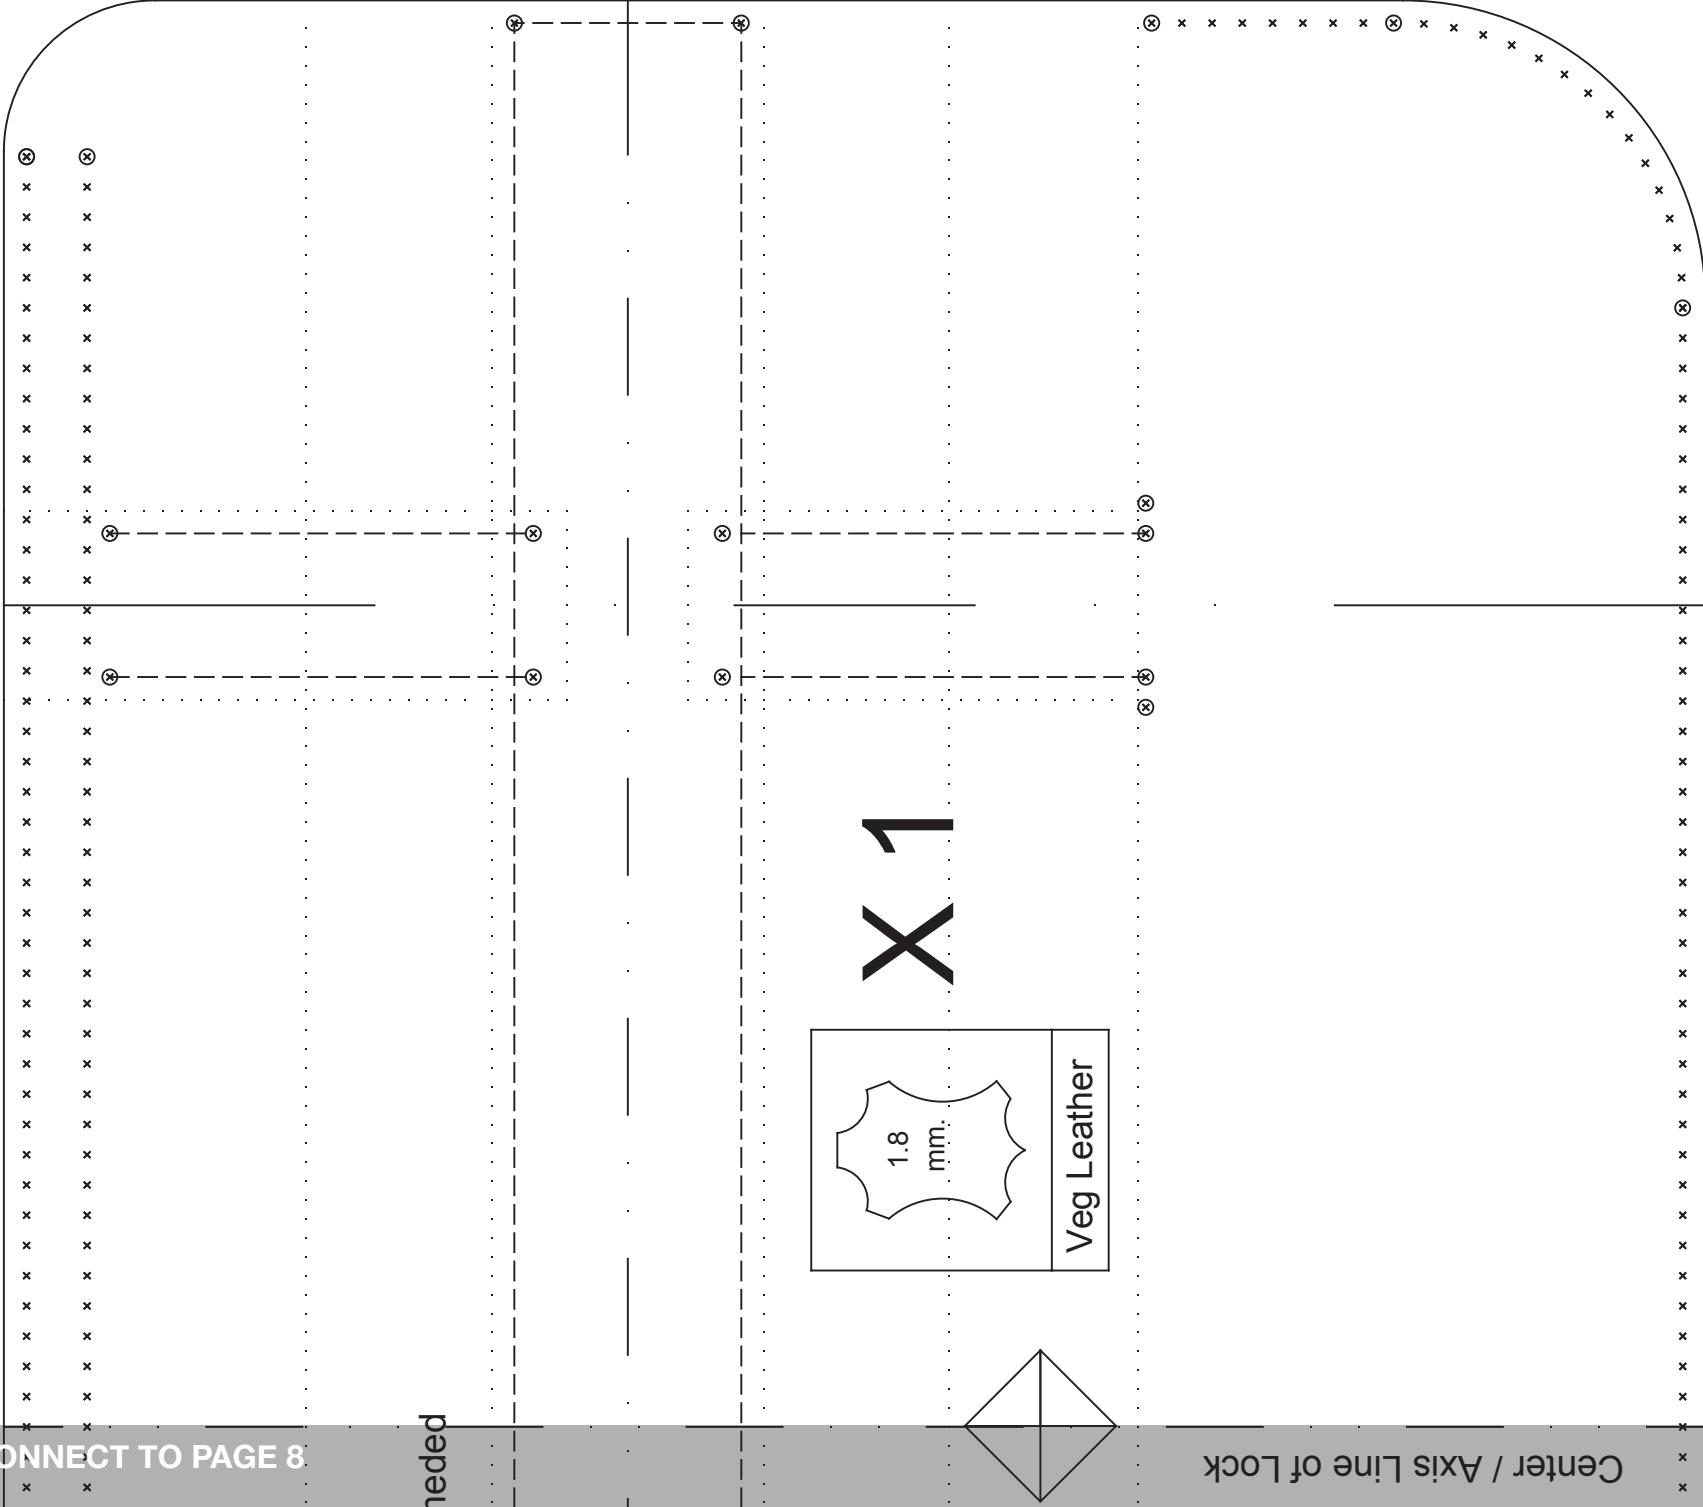

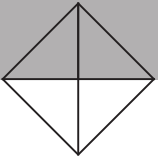

CONNECT TO PAGE 7


CraftsmanGus Pattern

Briefcase : Simple Days

BSD 001

Flap

1.8mm Veg Tanned Leather Recommended

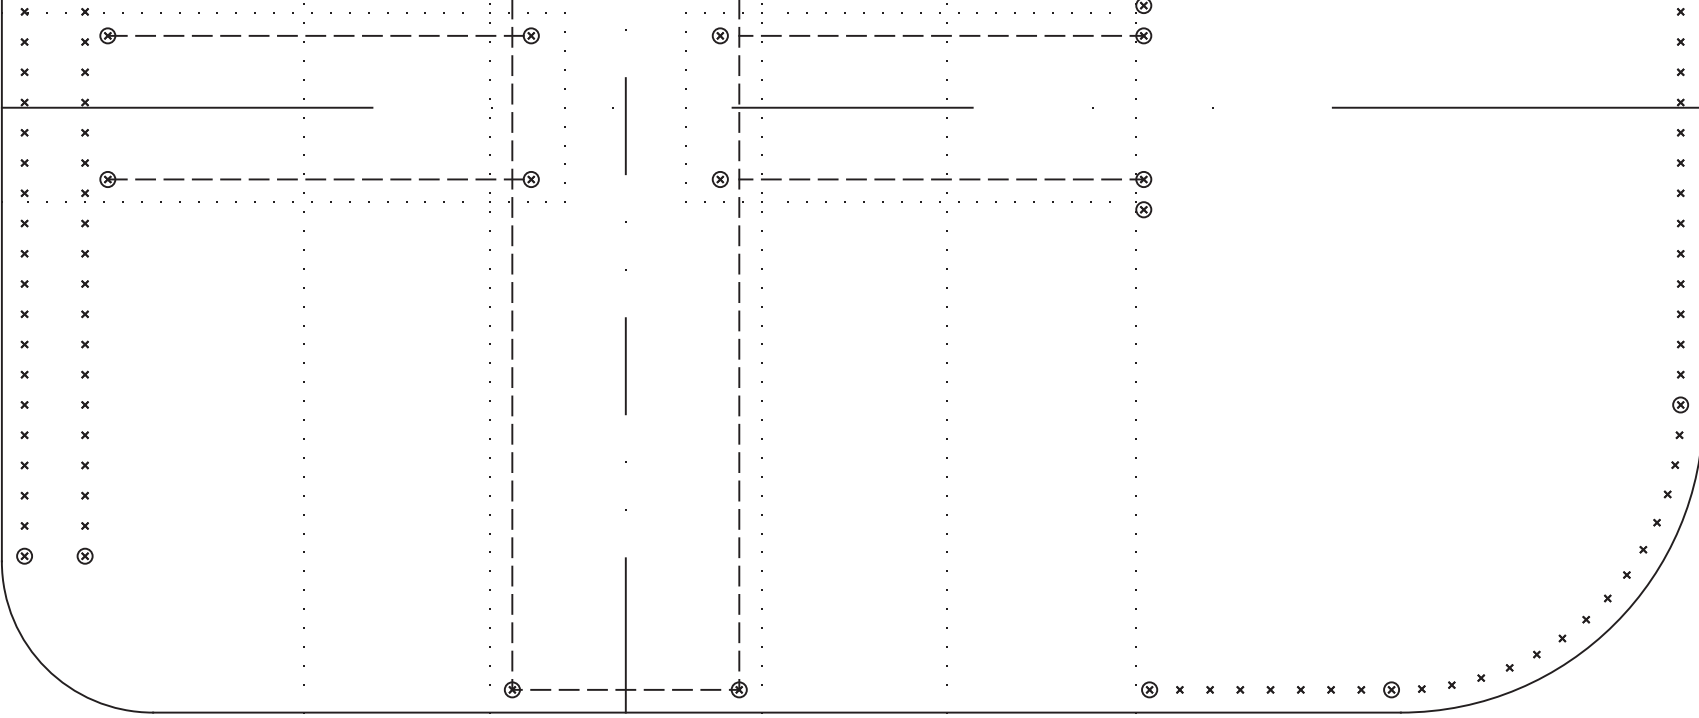





Center / Axis Line of Lock


Border of interfacing.




Triple Deck Briefcase

Page 9 of 11

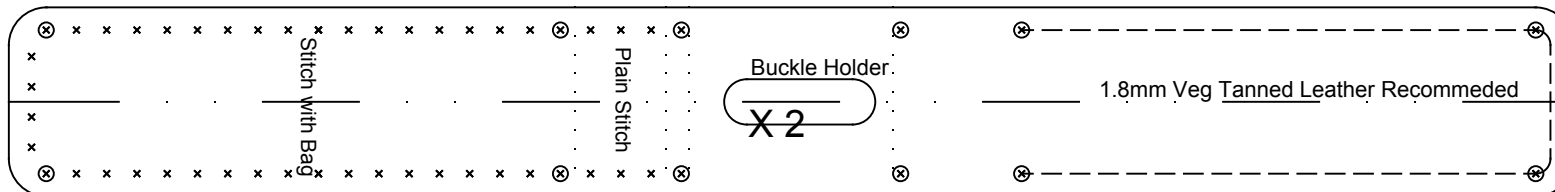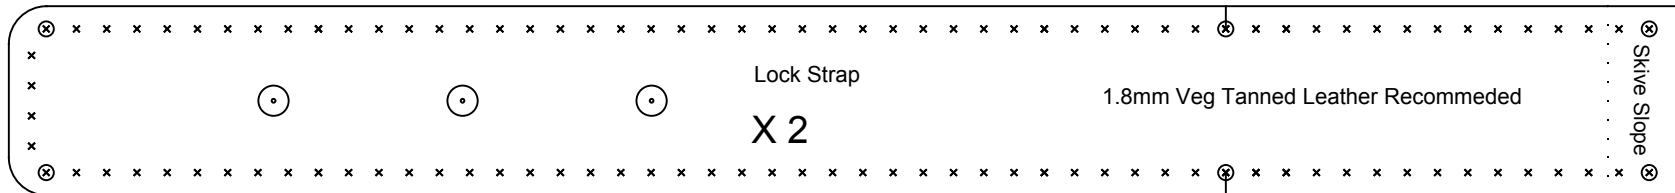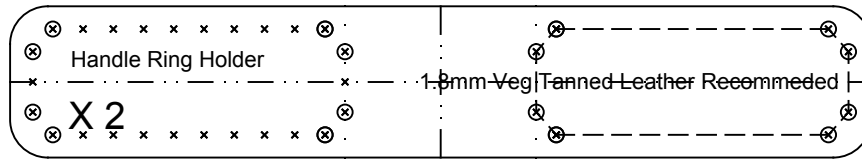

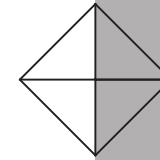

CONNECT TO PAGE 11

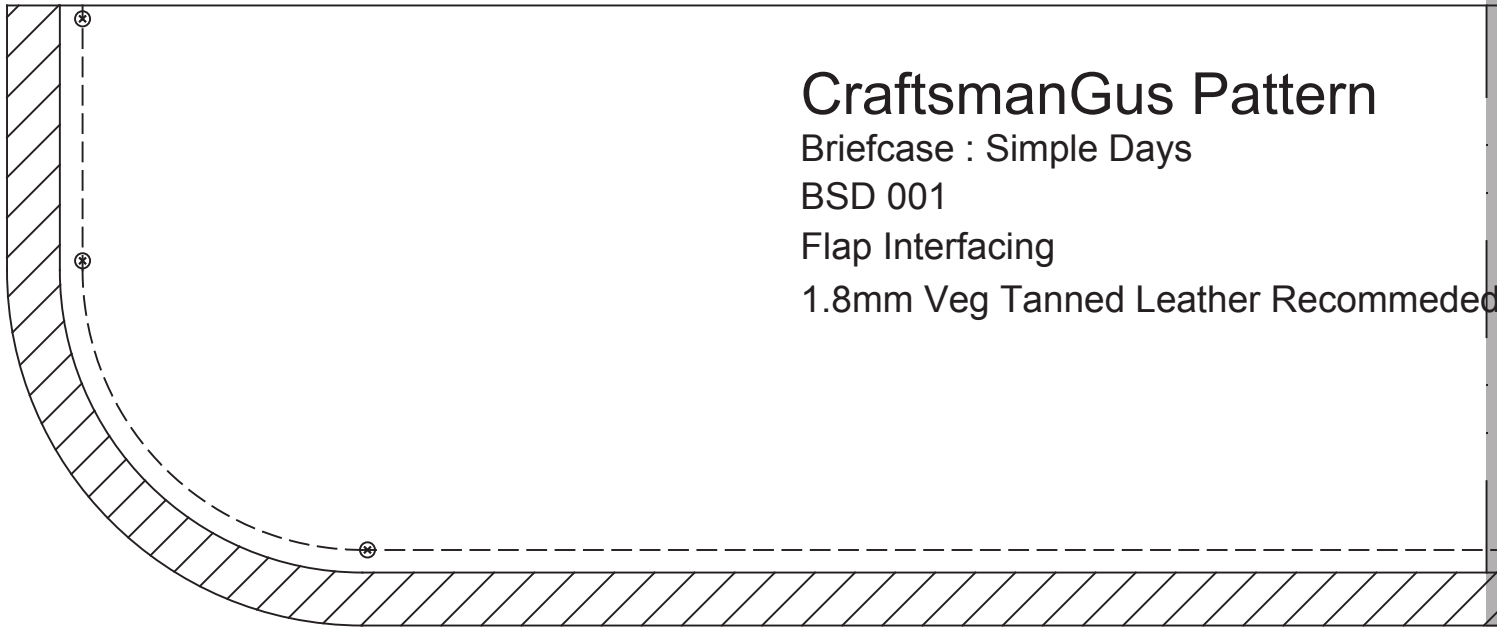

CraftsmanGus Pattern

Briefcase : Simple Days

BSD 001

Flap Interfacing

1.8mm Veg Tanned Leather Recommended



X 1



Skive in Slope

CraftsmanGus Pattern

Briefcase : Simple Days

BSD 001


Front & Back interfacing

1.5-1.8mm Chrome or Veg Tanned Leather Recommended



X 2

Glue all the area

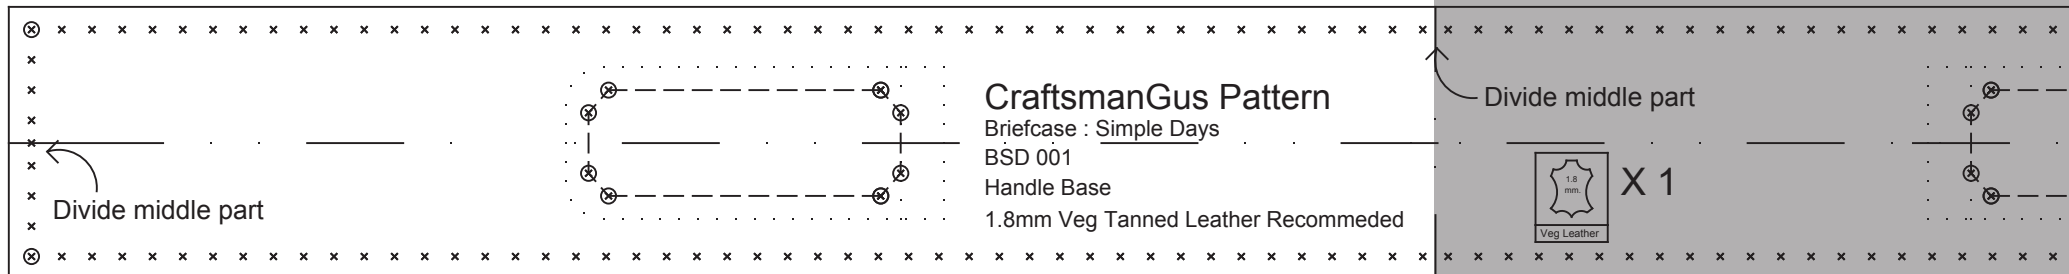

CraftsmanGus Pattern

Briefcase : Simple Days

BSD 001


Handle Base


1.8mm Veg Tanned Leather Recommended



X 1

Divide middle part

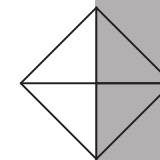

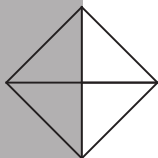

CONNECT TO PAGE 10


CraftsmanGus Pattern

Briefcase : Simple Days


BSD 001

Map Interfacing

1.8mm Veg Tanned Leather Recommended

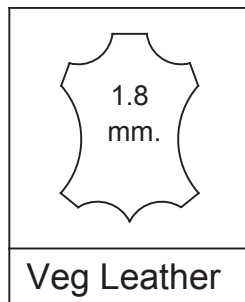

X 1


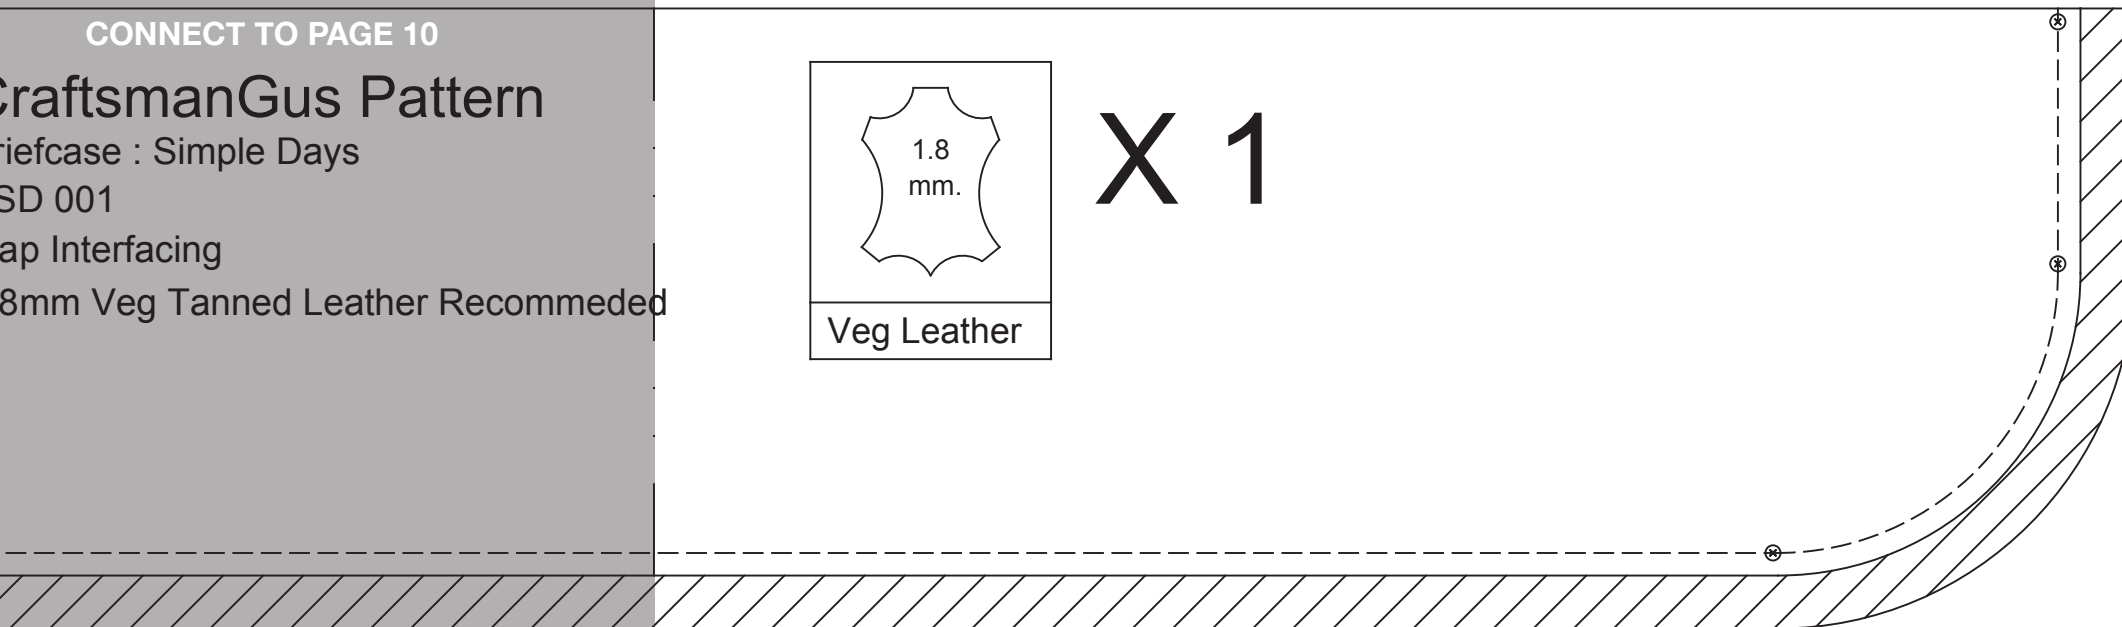


X 2

Recommended

Glue all the area

Skive in Slope

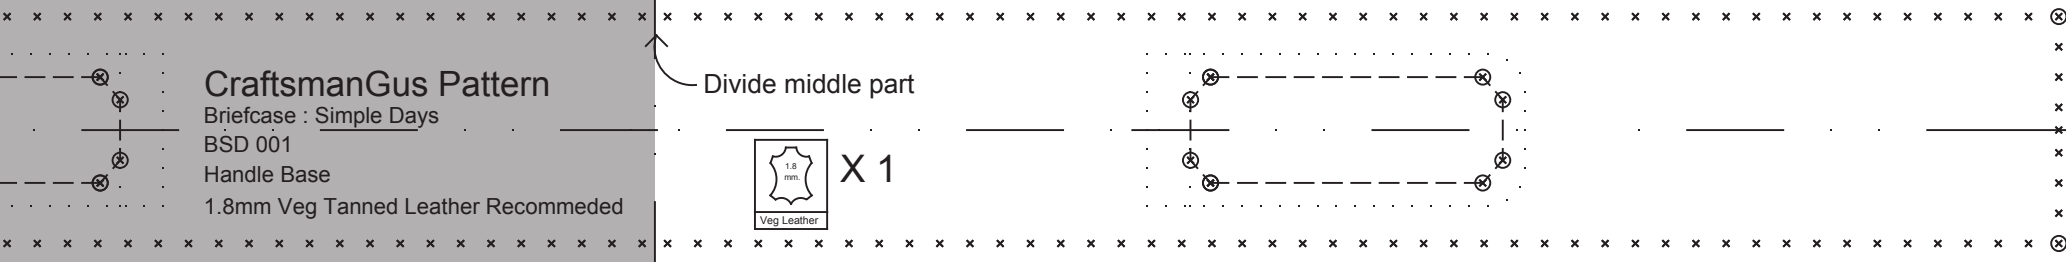

CraftsmanGus Pattern

Briefcase : Simple Days
BSD 001

Handle Base

1.8mm Veg Tanned Leather Recommended



X 1

Divide middle part

