



ACC-40 Instruction


Step 1: Thin A03's edge and glue it on A02, don't sew it now.

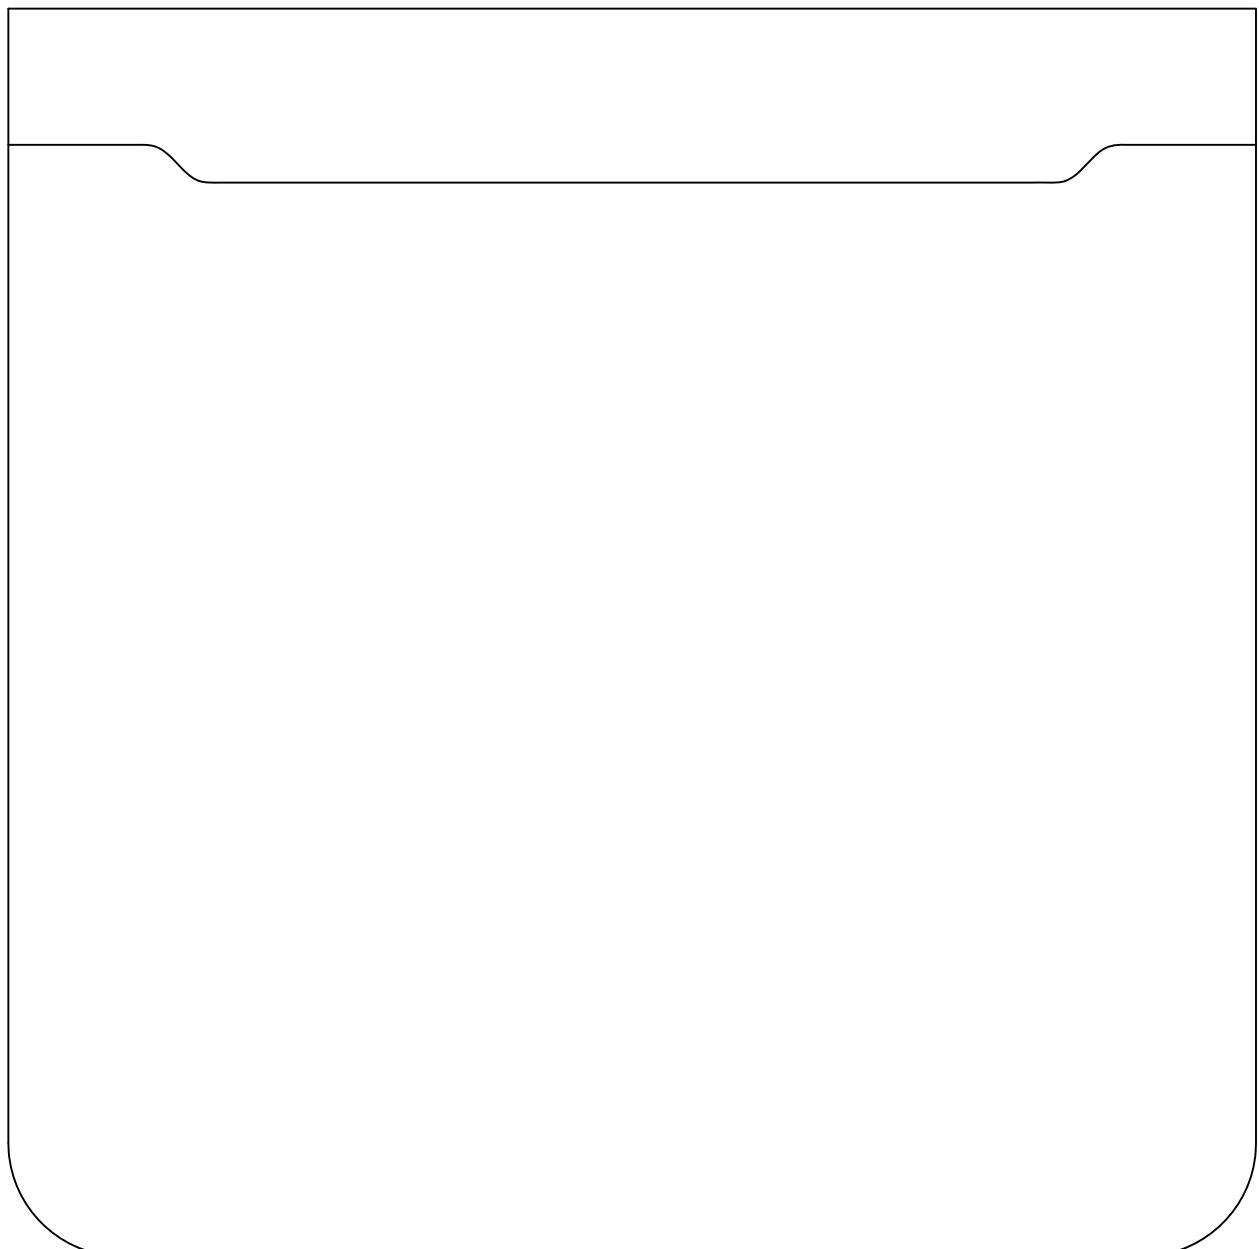

Step 2: Sew A06, A07, A04, A10, A11 on right places according to stitching lines, and shoot rivets according to the sketch, then sew zipper on right place.

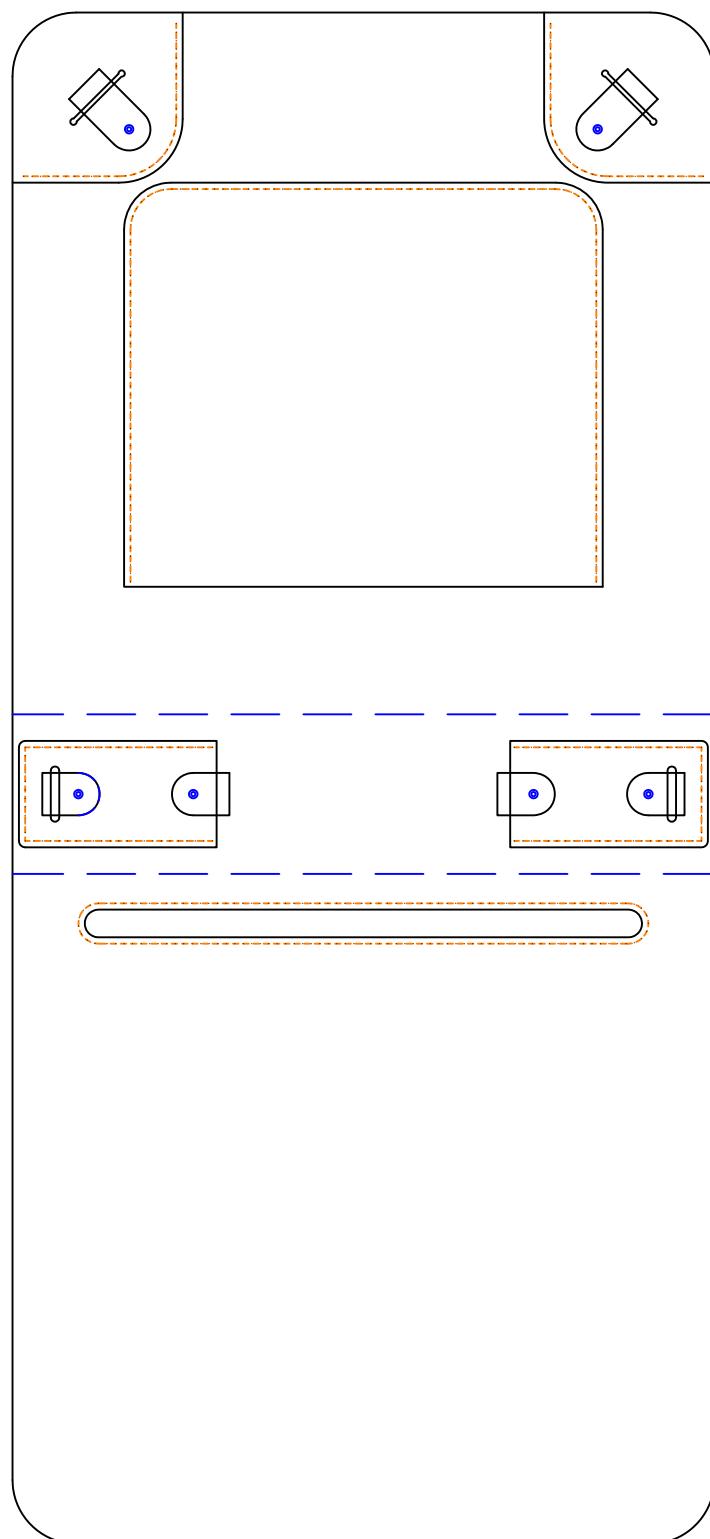


Step 3: Shoot snaps to fix A17 on A15, and glue the top side of A16 on A15, do the same to make pouch C's flap.

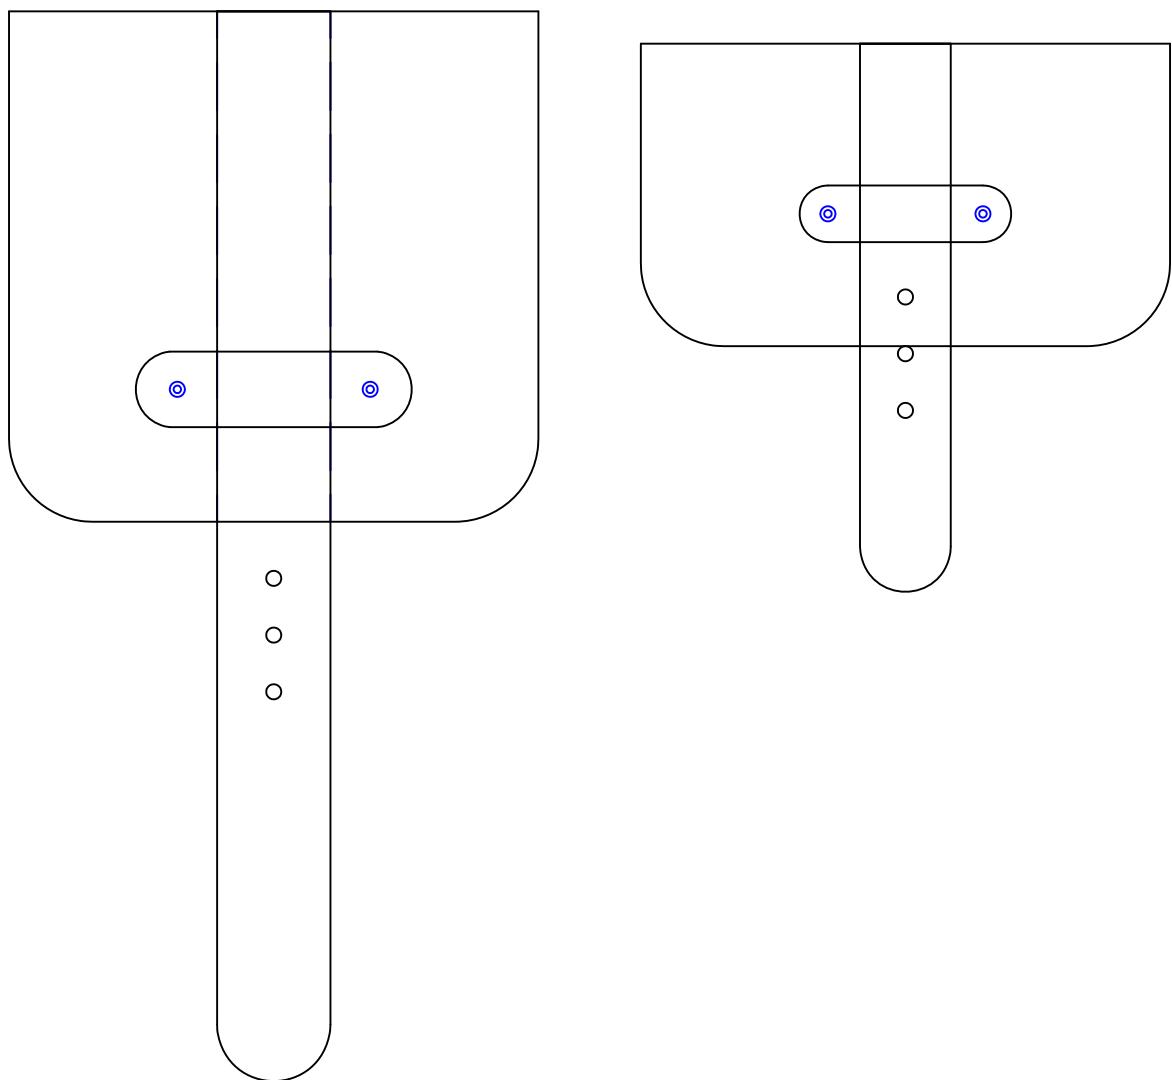


Step 4: Install A18 and A28 with lock and needle buckle, look at the pictures below carefully to know how it works.



Step 5: Sew A13, A14 together; Sew A20, A21 together; Sew A23, A24 together. And then, sew them in right place according to the stitching lines. Then sew A15, A22, A25 on according their stitching lines. Please notice that pouch A has a zipper slot, so install zipper before you do the above steps.

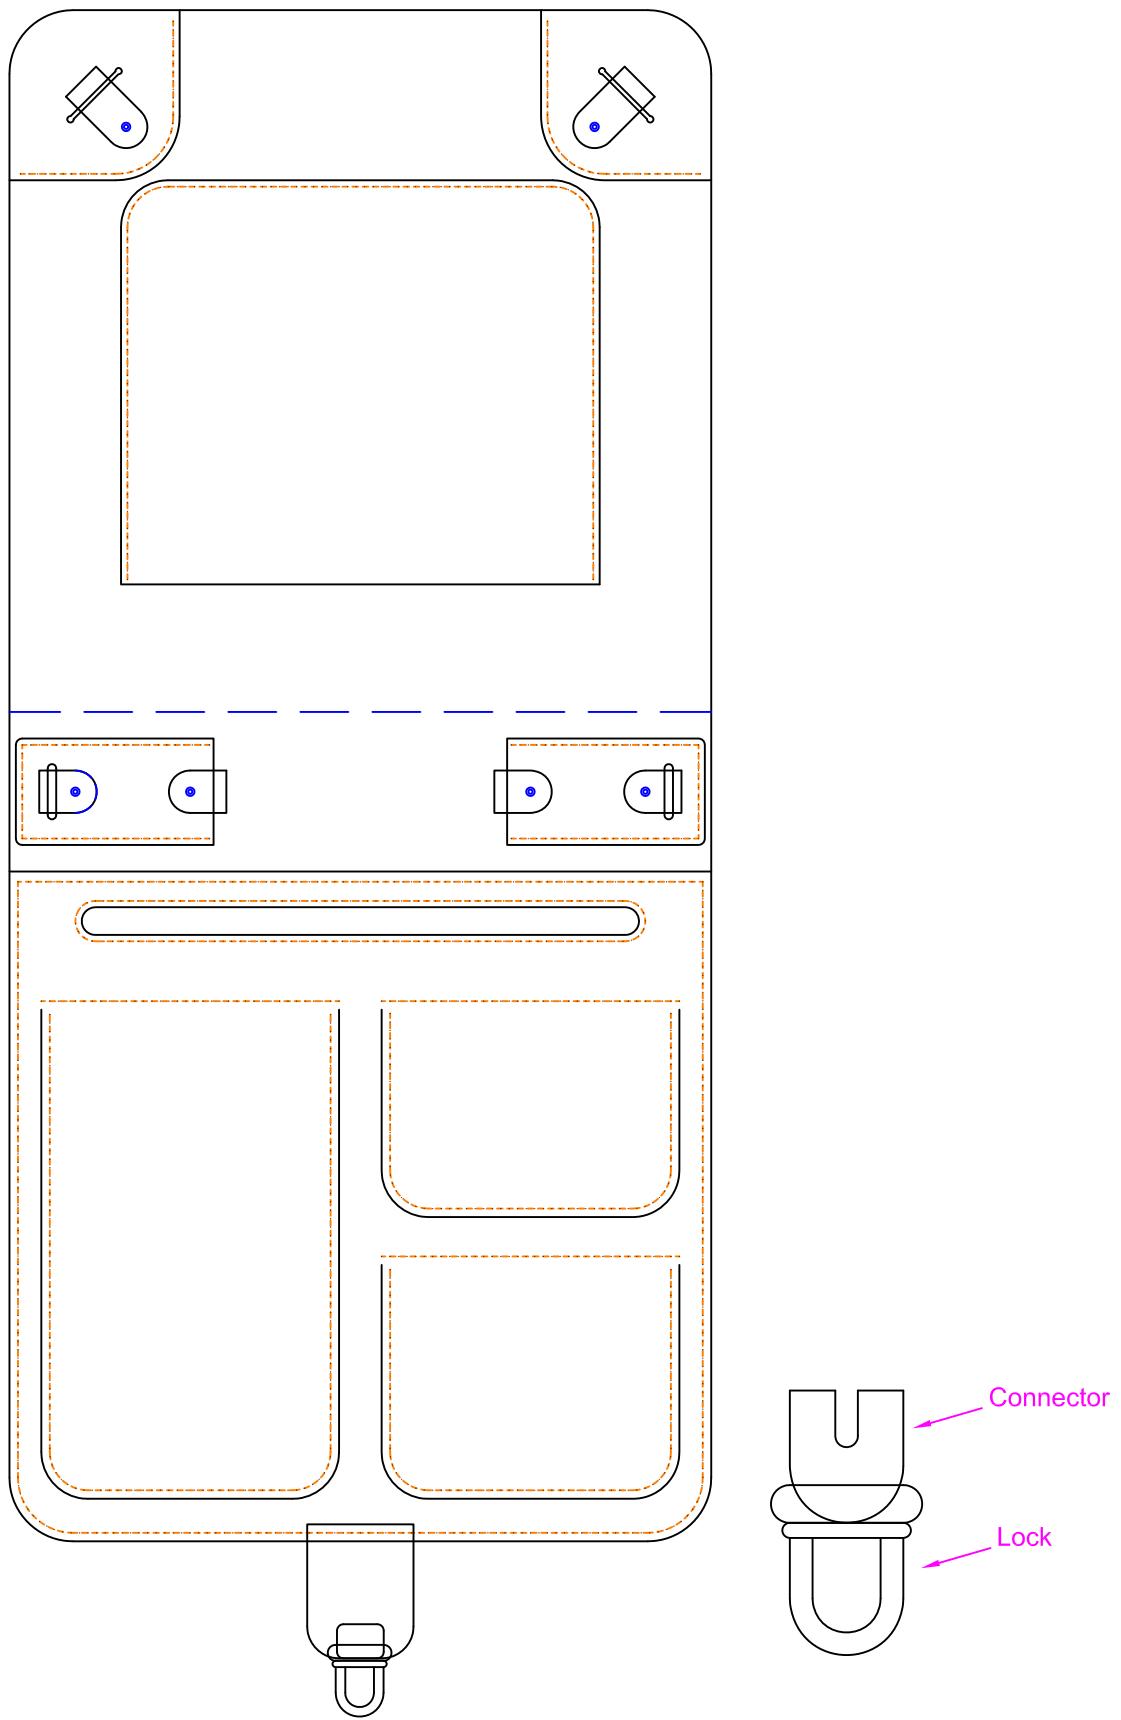

Step 6: Now, we make the handle, the way to make handle is very classic, please learn it carefully. First, fold the handle leather tip to tip by through the D-rings, and then paste the rest part with glue. Second, wrap the wrapper in the middle, and glue firmly. Third, make a stitch in the middle, the handle is OK.

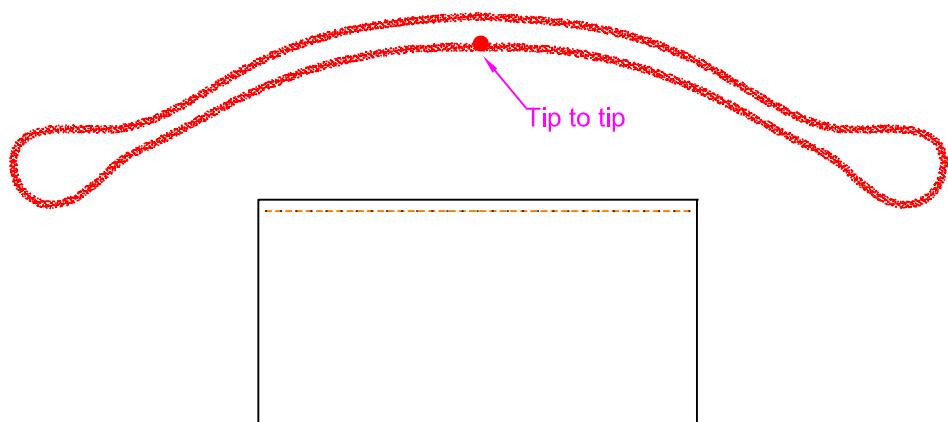

Step 7: Finally install zipper on A29 and stitch A29 with A01 and A02 by anchor points (green circles) overlap with each other, the bag is OK.

Notice:

- 1, You can burnish edges for aesthetic;
- 2, Here is the line instruction.

